

BMW CIC wiring diagram

Low-speed CAN via controller · default connection

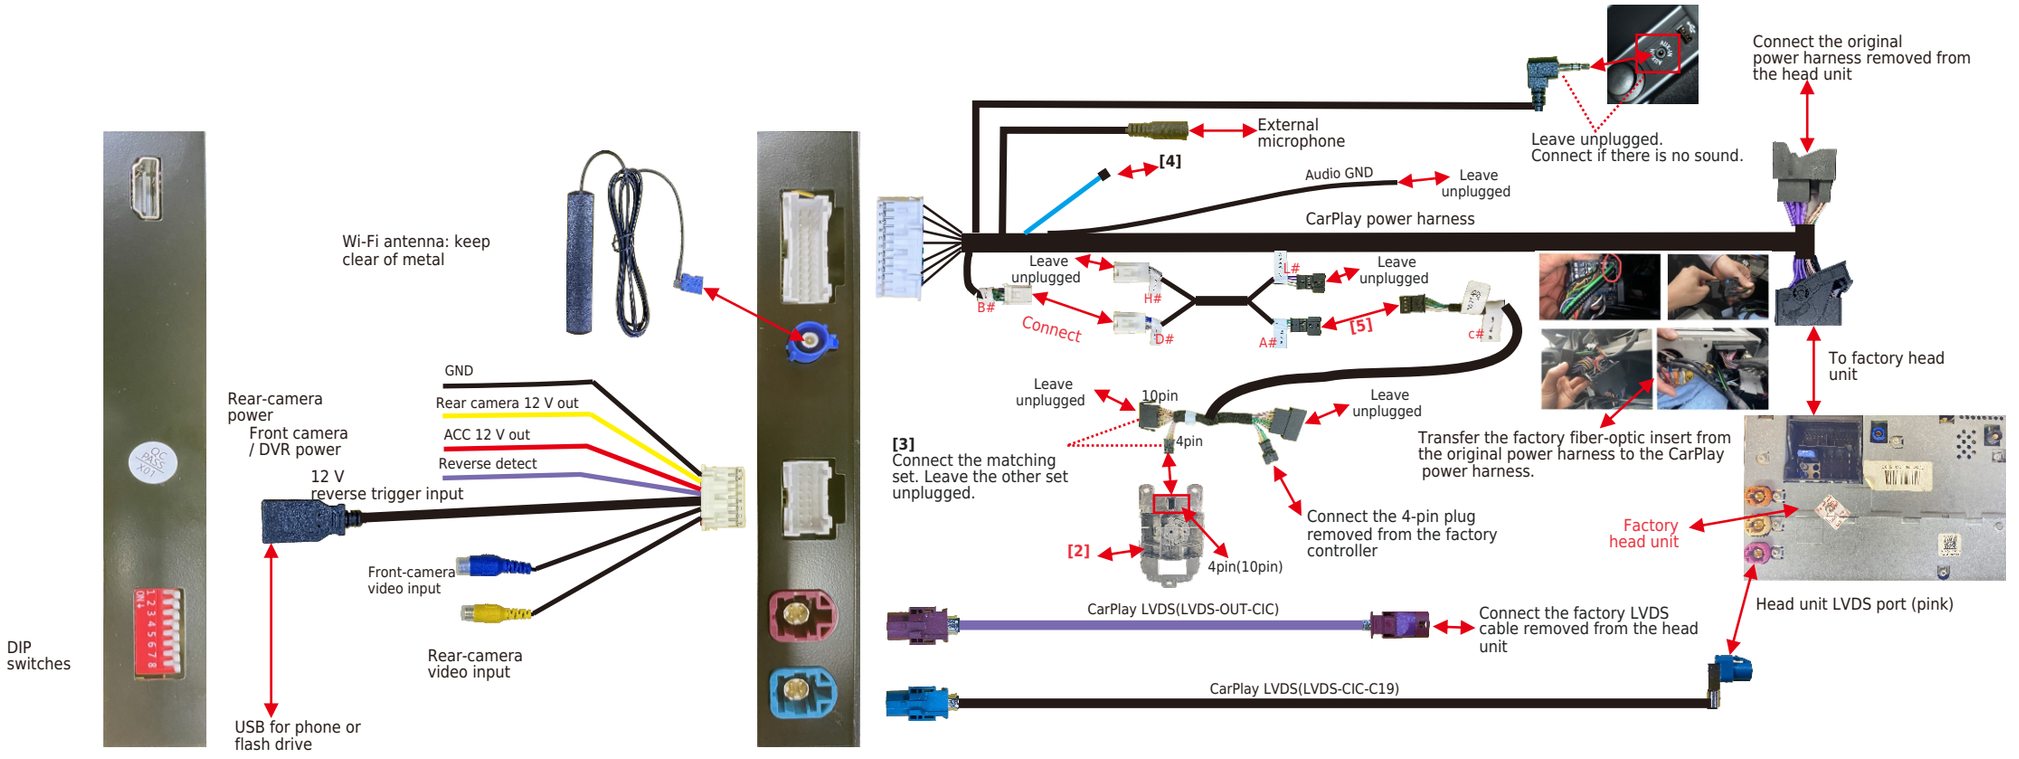

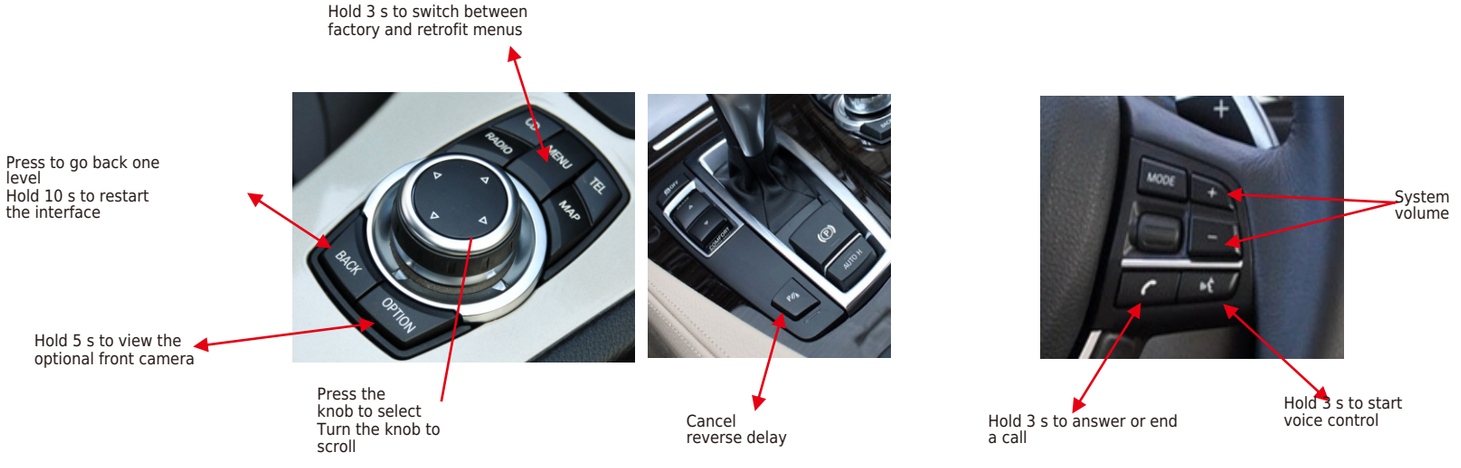

DIP switch settings



Setup notes

Unplug the interface power harness before changing DIP switches.

[1]

NUMBERED DIAGRAM NOTES

[1] External microphone: switch 7 ON.

[2] Controller knob


[3] Select the set of plugs that matches the controller.


[4] Bluetooth antenna

[5] Connect

BMW CIC wiring diagram

Low-speed CAN via head unit · second connection

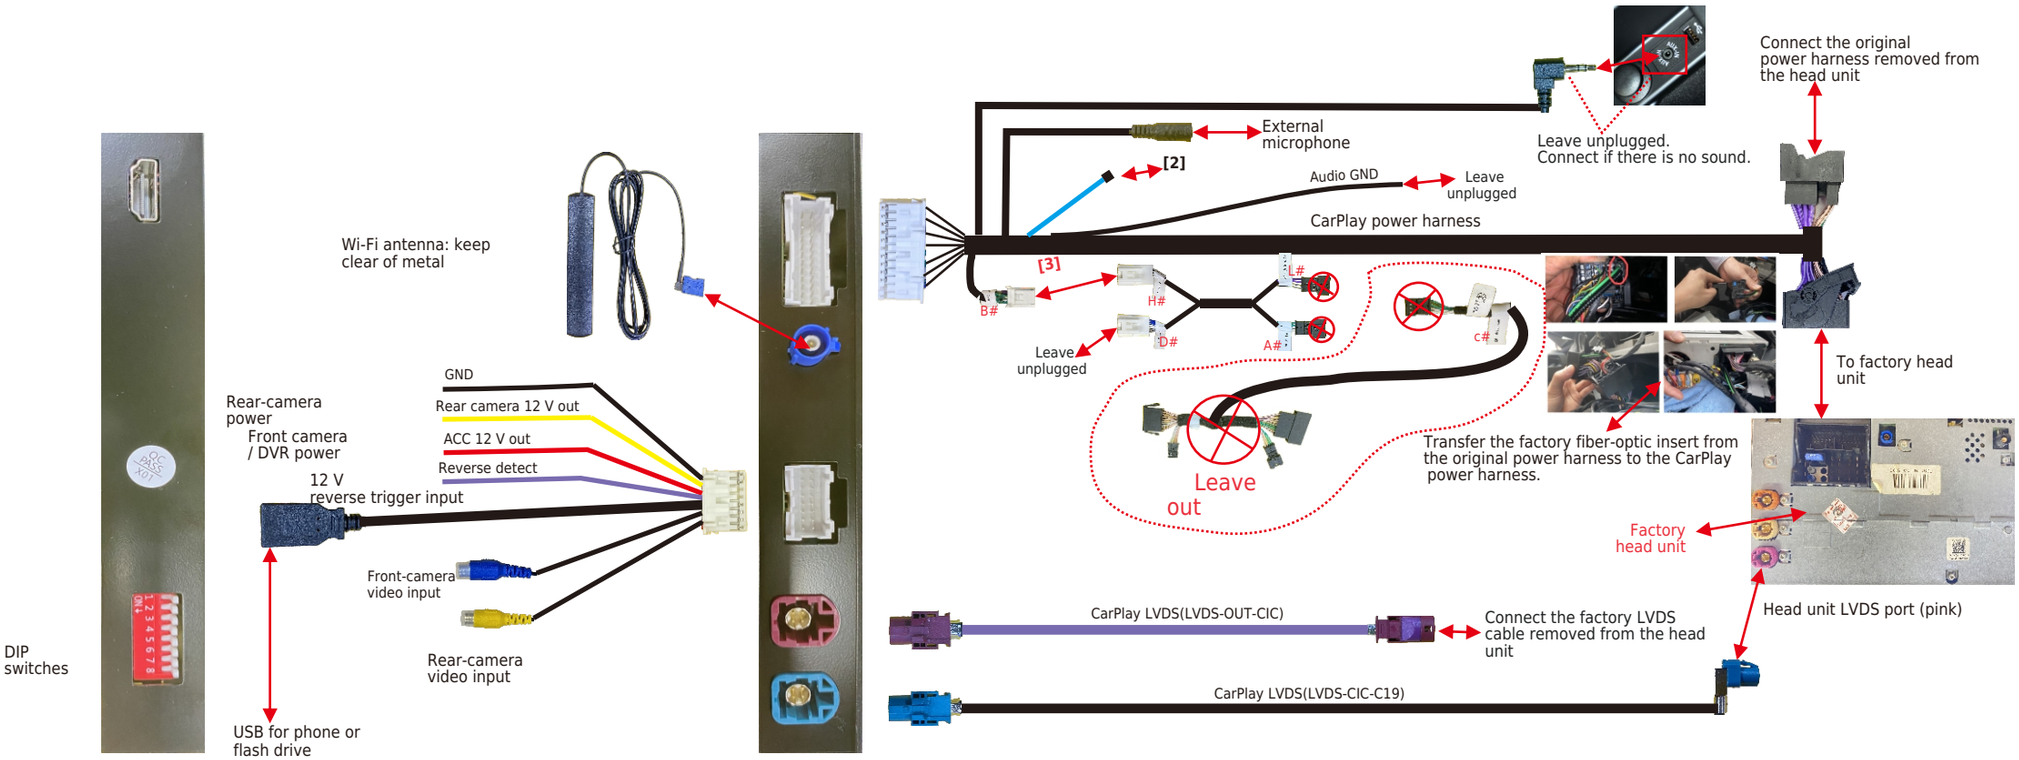

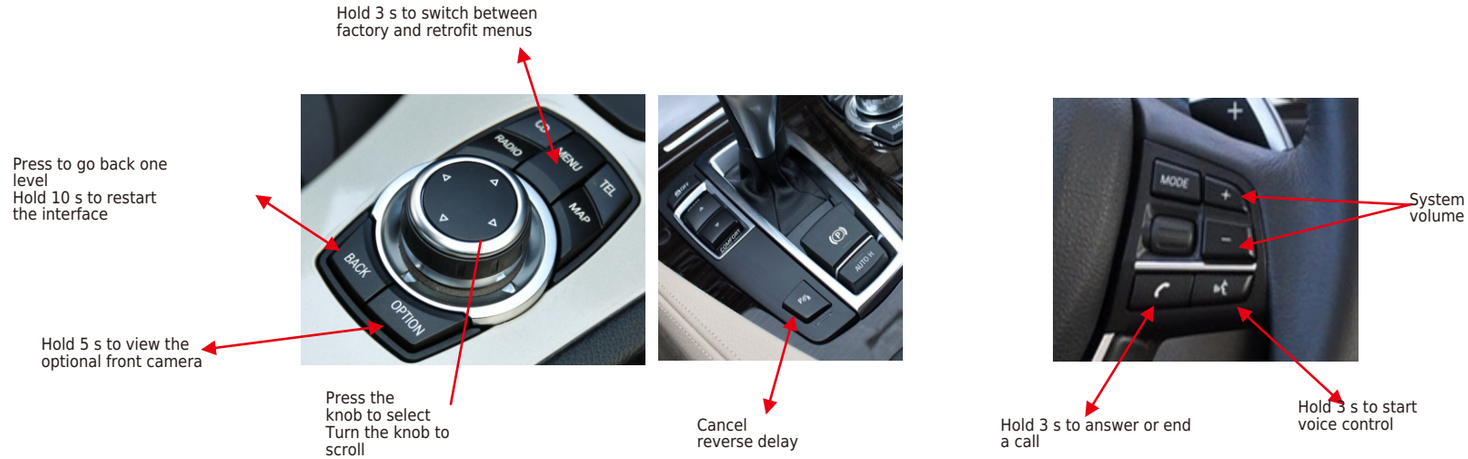

DIP switch settings



Setup notes

Unplug the interface power harness before changing DIP switches.
[1]

NUMBERED DIAGRAM NOTES


[1] External microphone: switch 7 ON.


[2] Bluetooth antenna

[3] Connect

BMW CIC wiring diagram

High-speed CAN via controller · third connection

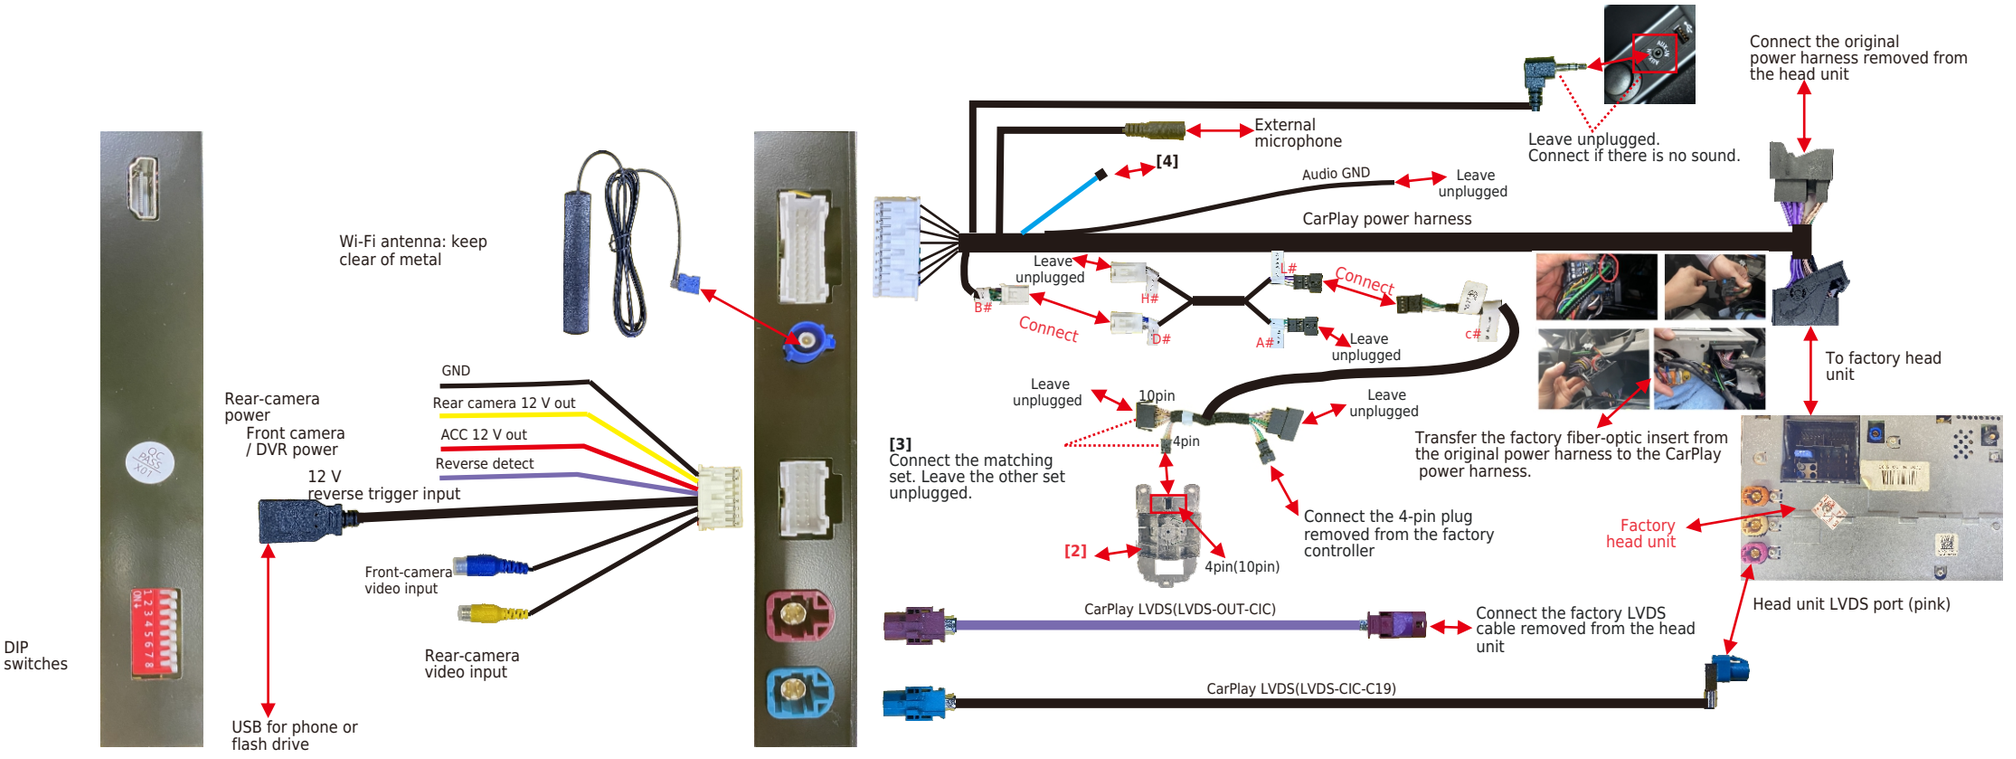

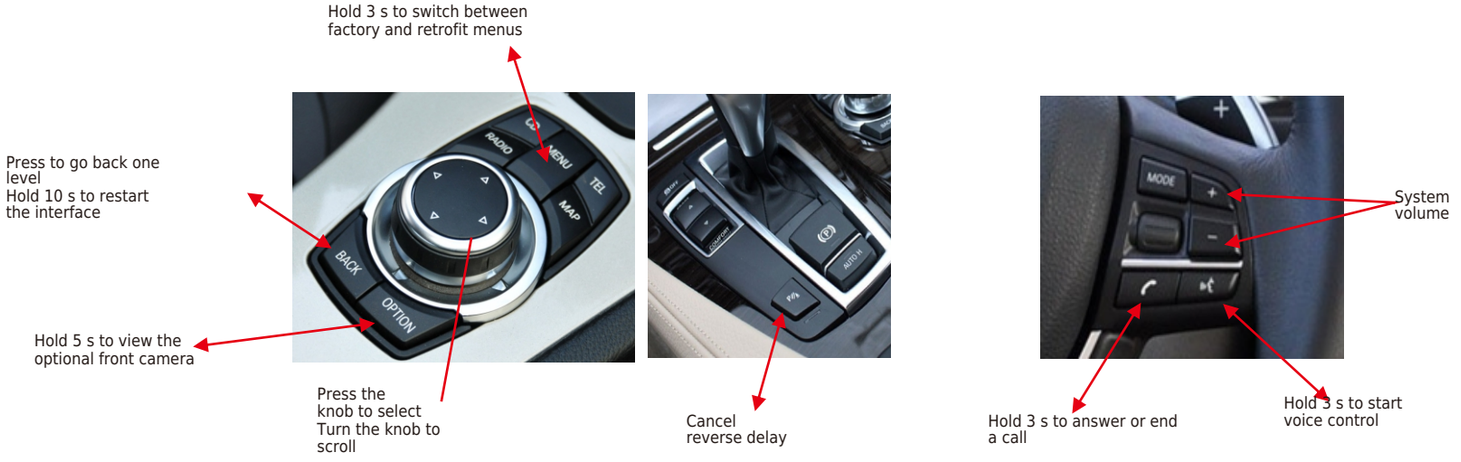

DIP switch settings

8.8"/10.25"



Setup notes

This setting applies only to certain BMW 5, 6 and 7 Series with a 10.25-inch display. Unplug the interface power harness before changing DIP switches.

[1]

NUMBERED DIAGRAM NOTES

[1] External microphone: switch 7 ON.

[2] Controller knob

[3] Select the set of plugs that matches the controller.

[4] Bluetooth antenna