
Lexus factory controller wiring diagram

Rotary controller

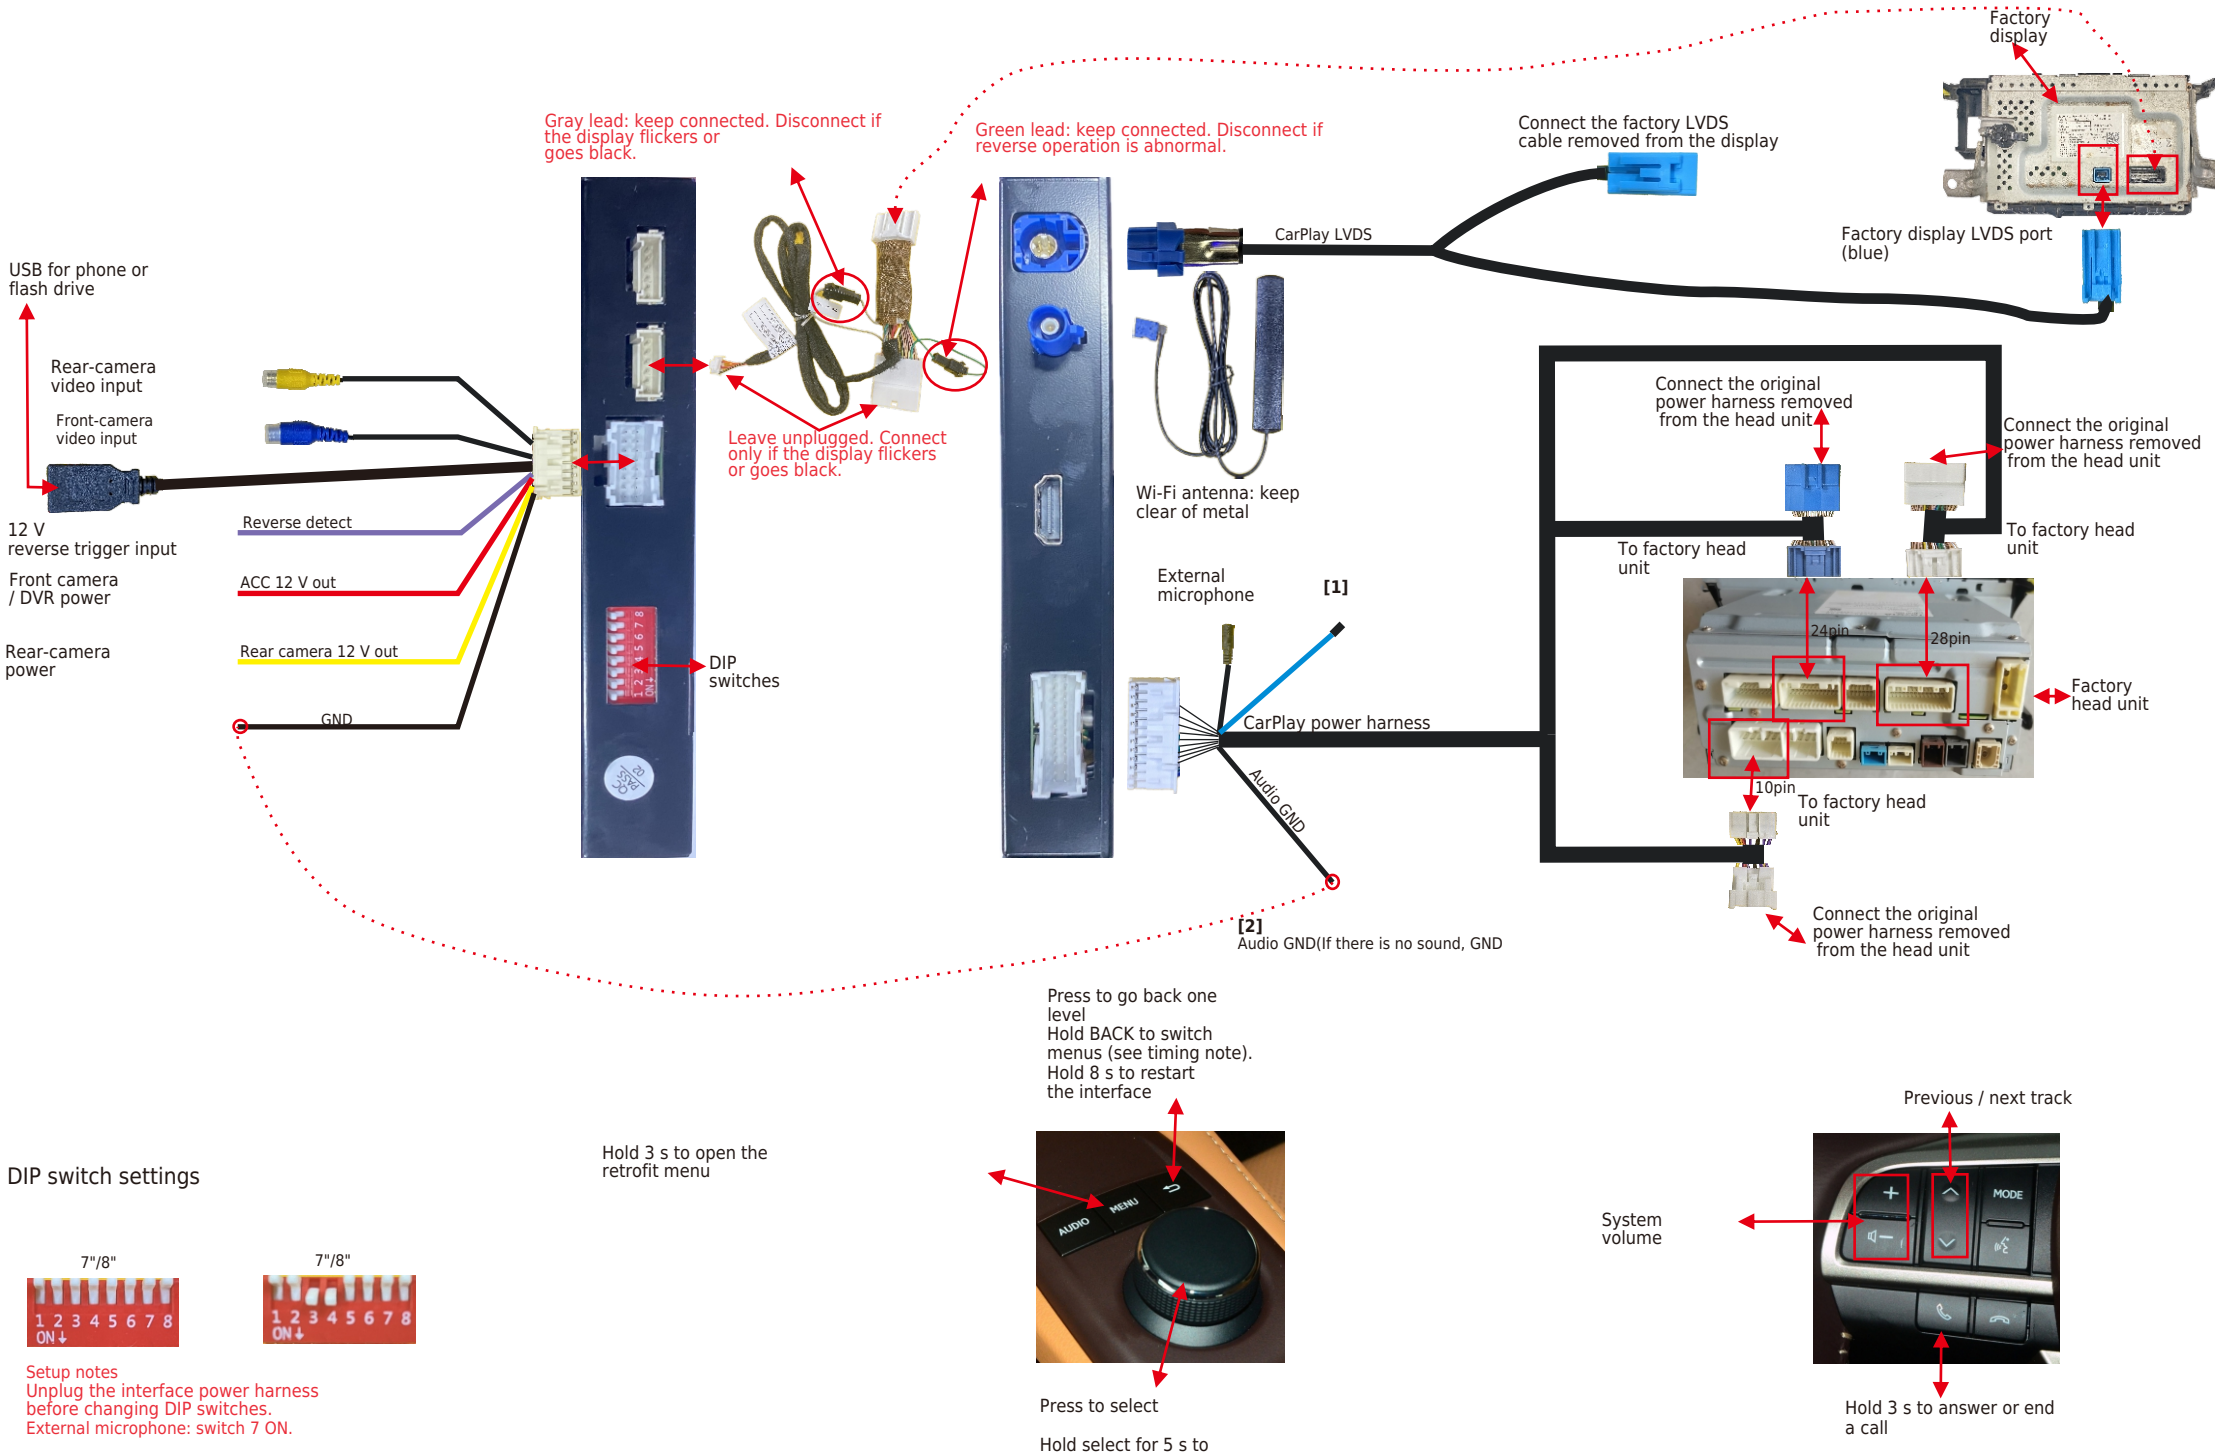

DIP switch settings

Setup notes
Unplug the interface power harness before changing DIP switches.
External microphone: switch 7 ON.

NUMBERED DIAGRAM NOTES


[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.

BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram.

Lexus factory controller wiring diagram

Large touchpad

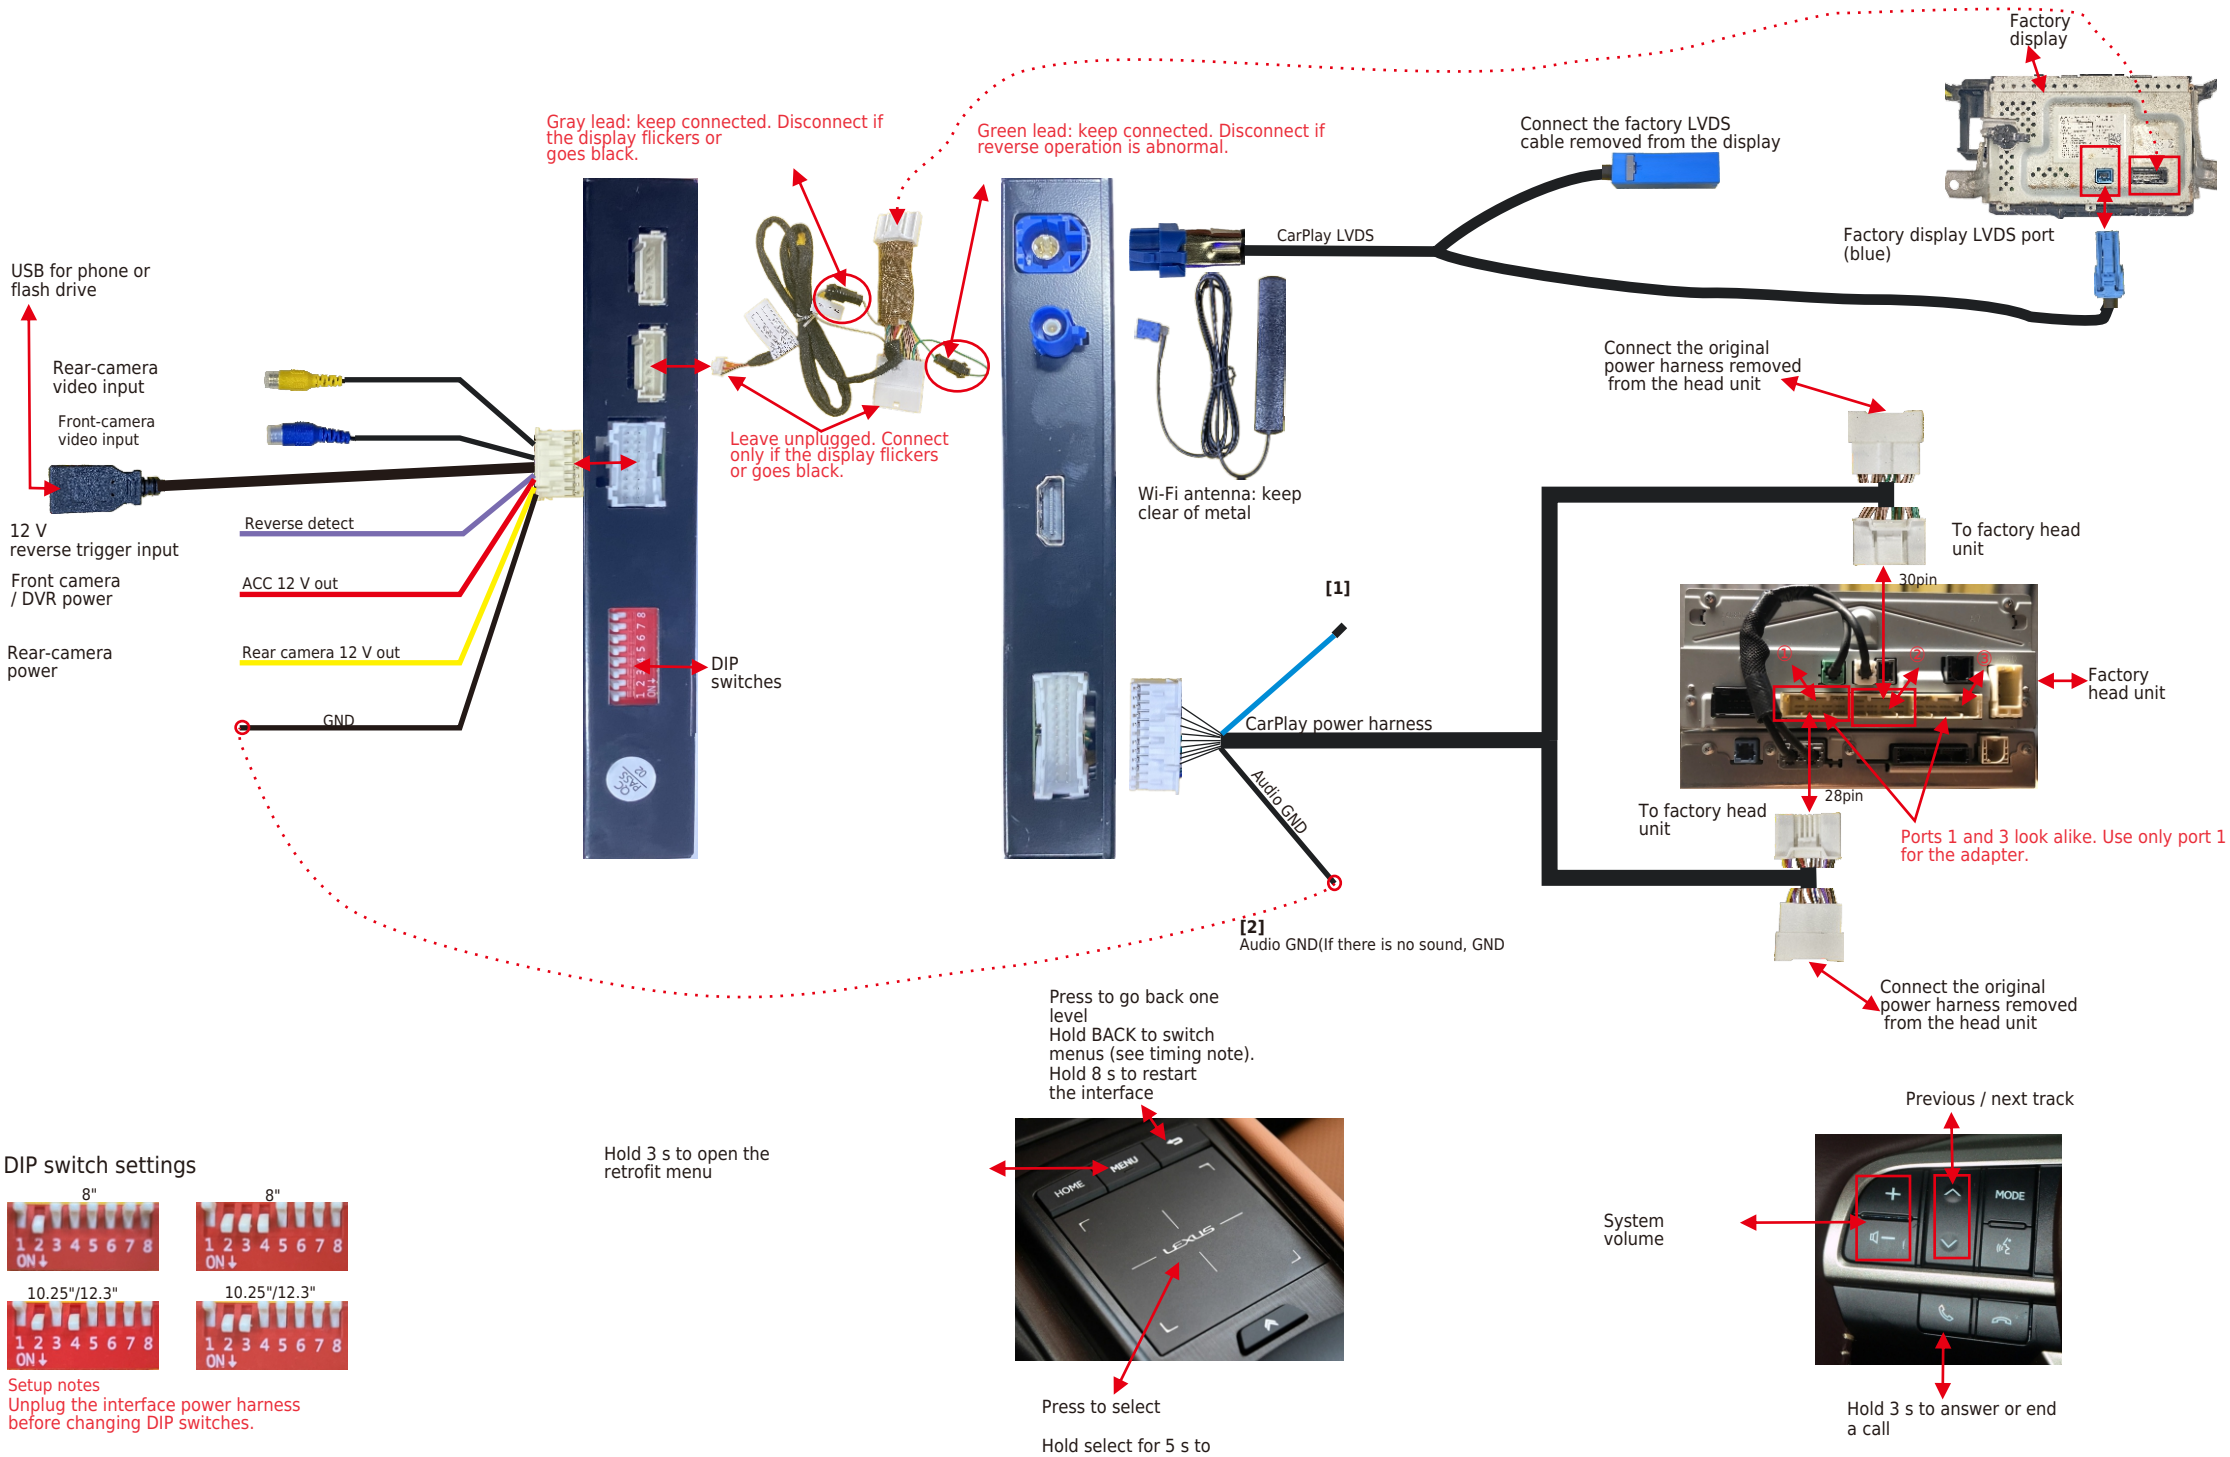

DIP switch settings

Setup notes
Unplug the interface power harness before changing DIP switches.

NUMBERED DIAGRAM NOTES

[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.

BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram.