
Lexus joystick / small touchpad wiring diagram

Head unit only · default connection

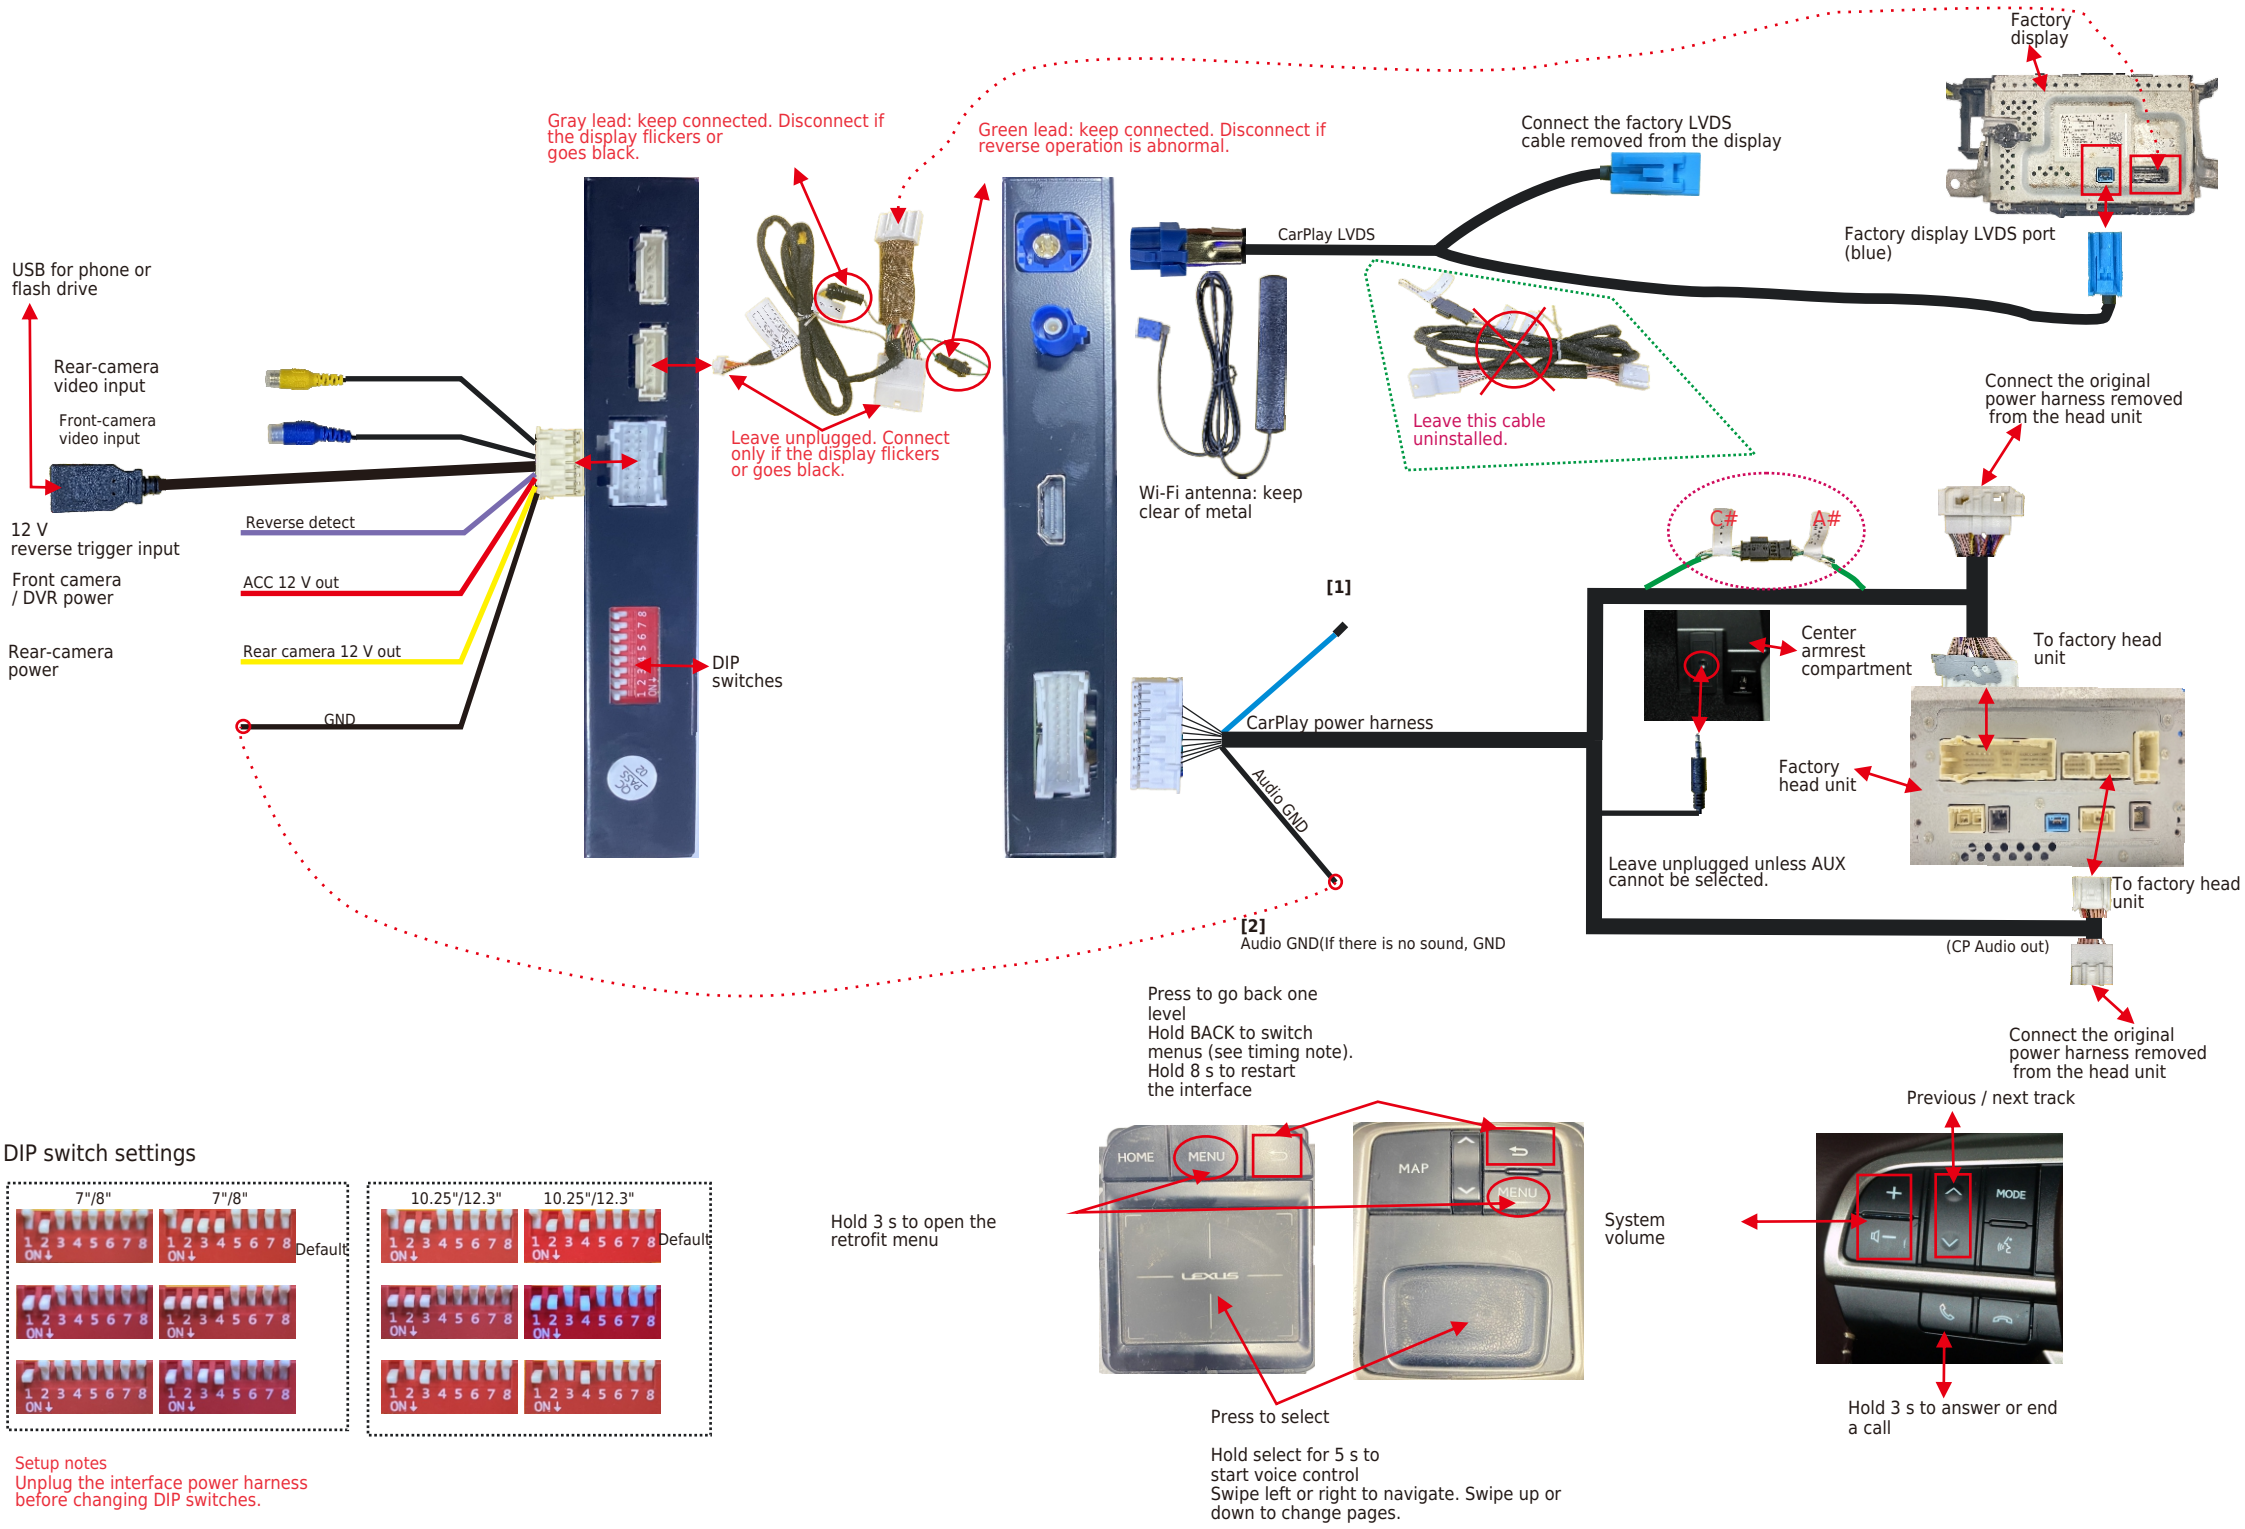

DIP switch settings

Setup notes
Unplug the interface power harness before changing DIP switches.

NUMBERED DIAGRAM NOTES


[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.


BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram.

Lexus joystick / small touchpad wiring diagram

Head unit and joystick · alternate connection

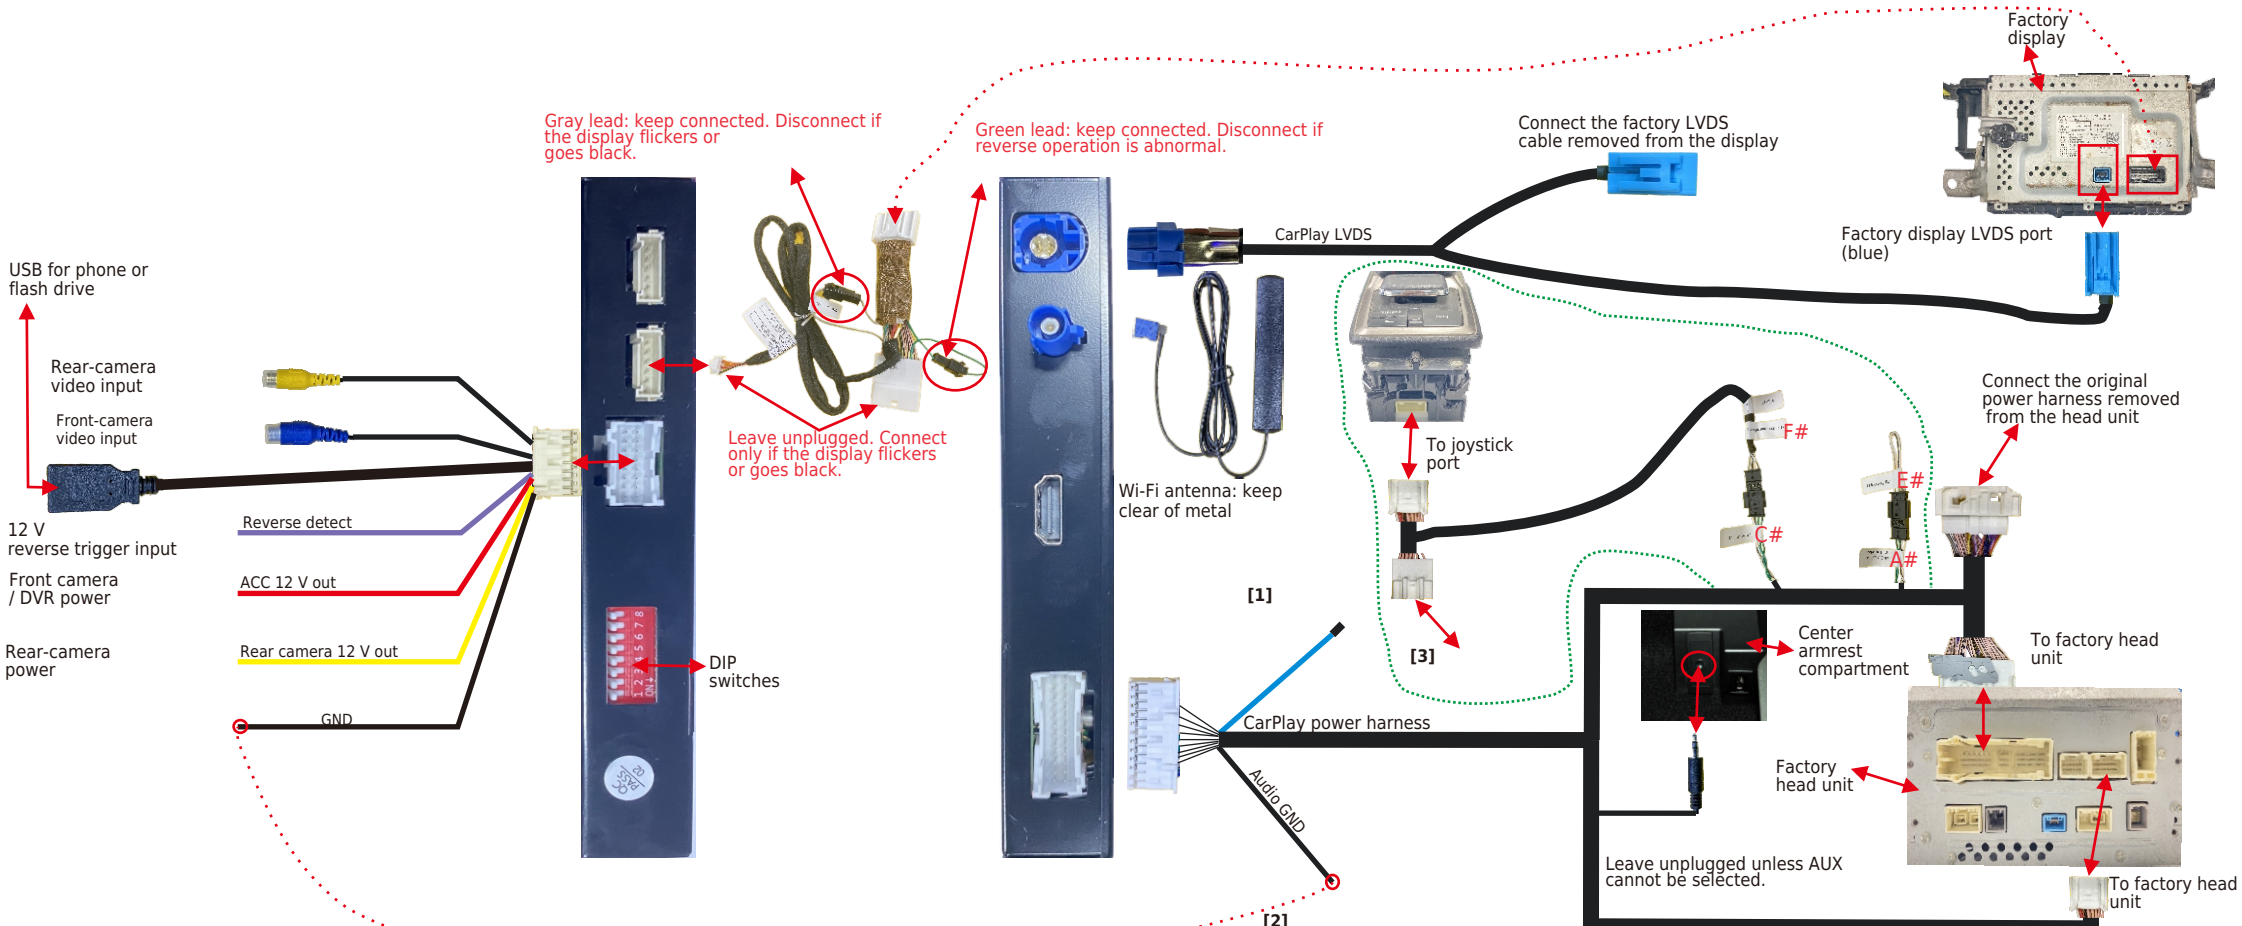


DIP switch settings

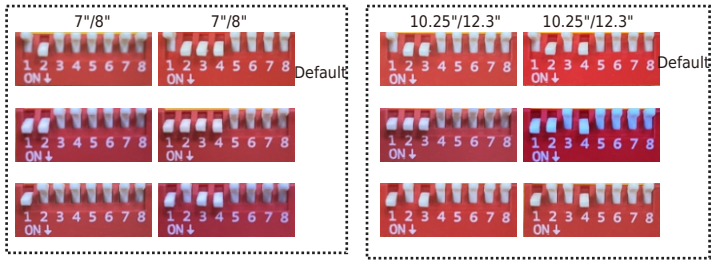

Setup notes
Unplug the interface power harness before changing DIP switches.

Press to go back one level
Hold BACK to switch menus (see timing note).
Hold 8 s to restart the interface

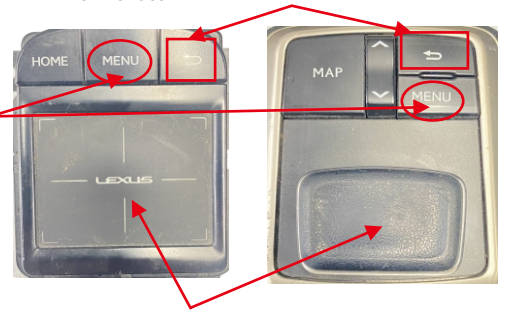

Hold 3 s to open the retrofit menu

Press to select

Hold select for 5 s to start voice control
Swipe left or right to navigate. Swipe up or down to change pages.

System volume

Previous / next track



Hold 3 s to answer or end a call

NUMBERED DIAGRAM NOTES

[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.

[3] Connect the cable removed from the joystick

BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram.