
Mercedes-Benz NTG 5.0 wiring diagram

Bluetooth audio transmitter

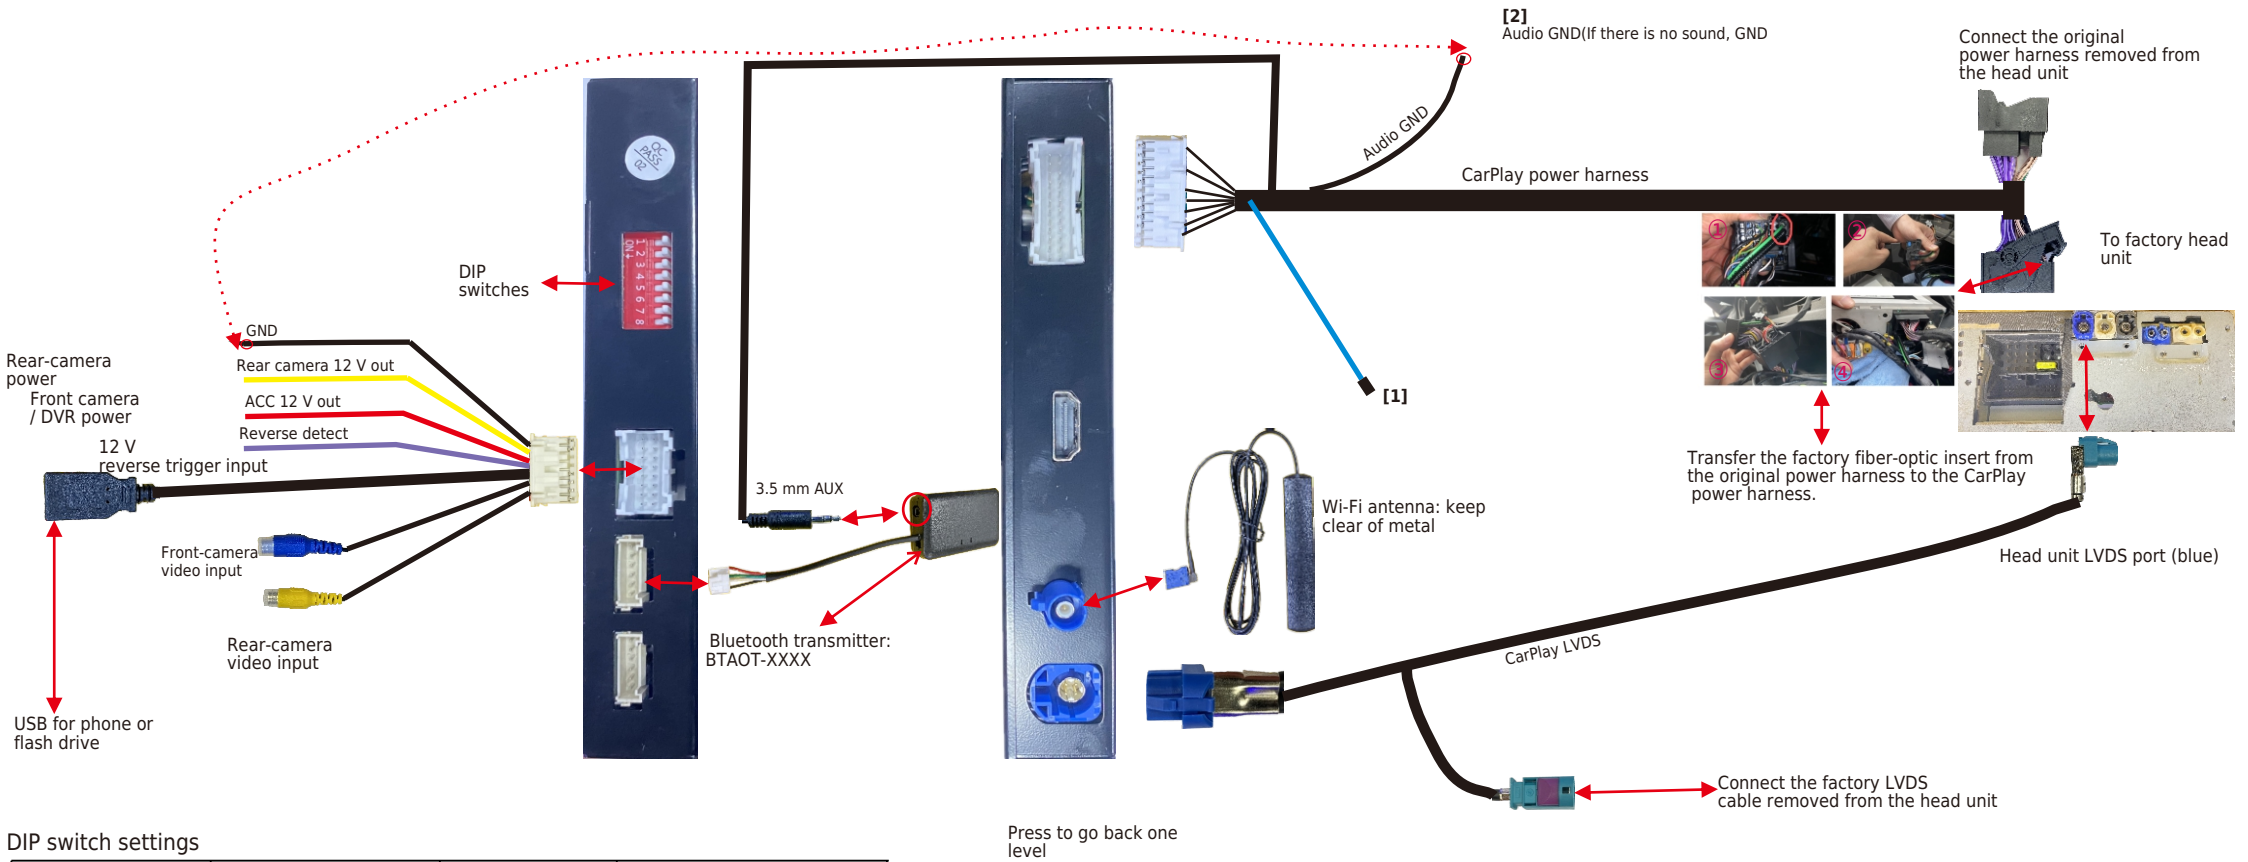



DIP switch settings

Model	Screen size	System	DIP settings
S	12.3	NTG5.0	6,8 ON
X/V/C/GLC	8.4(960*575)		5,6,8 ON
C/GLC/GLS/E	7/8.4(800*480)		8 ON
C	6.3		5,8 ON
A/B/CLA/GLA/GLE/E/S	12.3	NTG4.7	4,6,8 ON
	8.4(960*575)		4,5,6,8 ON
	7/8.4(800*480)		4,8 ON
	6.3		4,5,8 ON
GLB/CLA/CLS	12.3	NTG4.8	3,4,6,8 ON
	8.4(960*575)		3,4,5,6,8 ON
	7/8.4(800*480)		3,4,8 ON
	6.3		3,4,5,8 ON

Setup notes

Use the chart as a starting point. If the display is incorrect, verify the NTG version and settings with EZT.

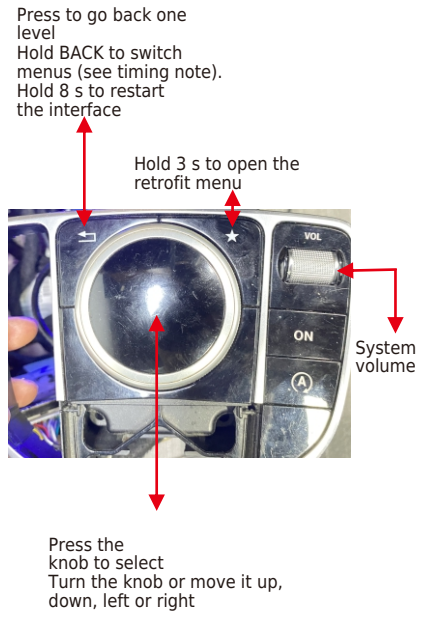

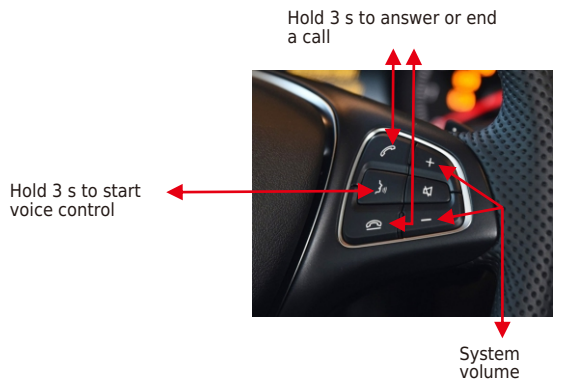

NUMBERED DIAGRAM NOTES


[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.

BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram. The 8.4-inch resolution differs between the wiring chart and the manual. Confirm your original display and interface revision before setting switches.

Mercedes-Benz NTG 5.0 wiring diagram


USB audio adapter

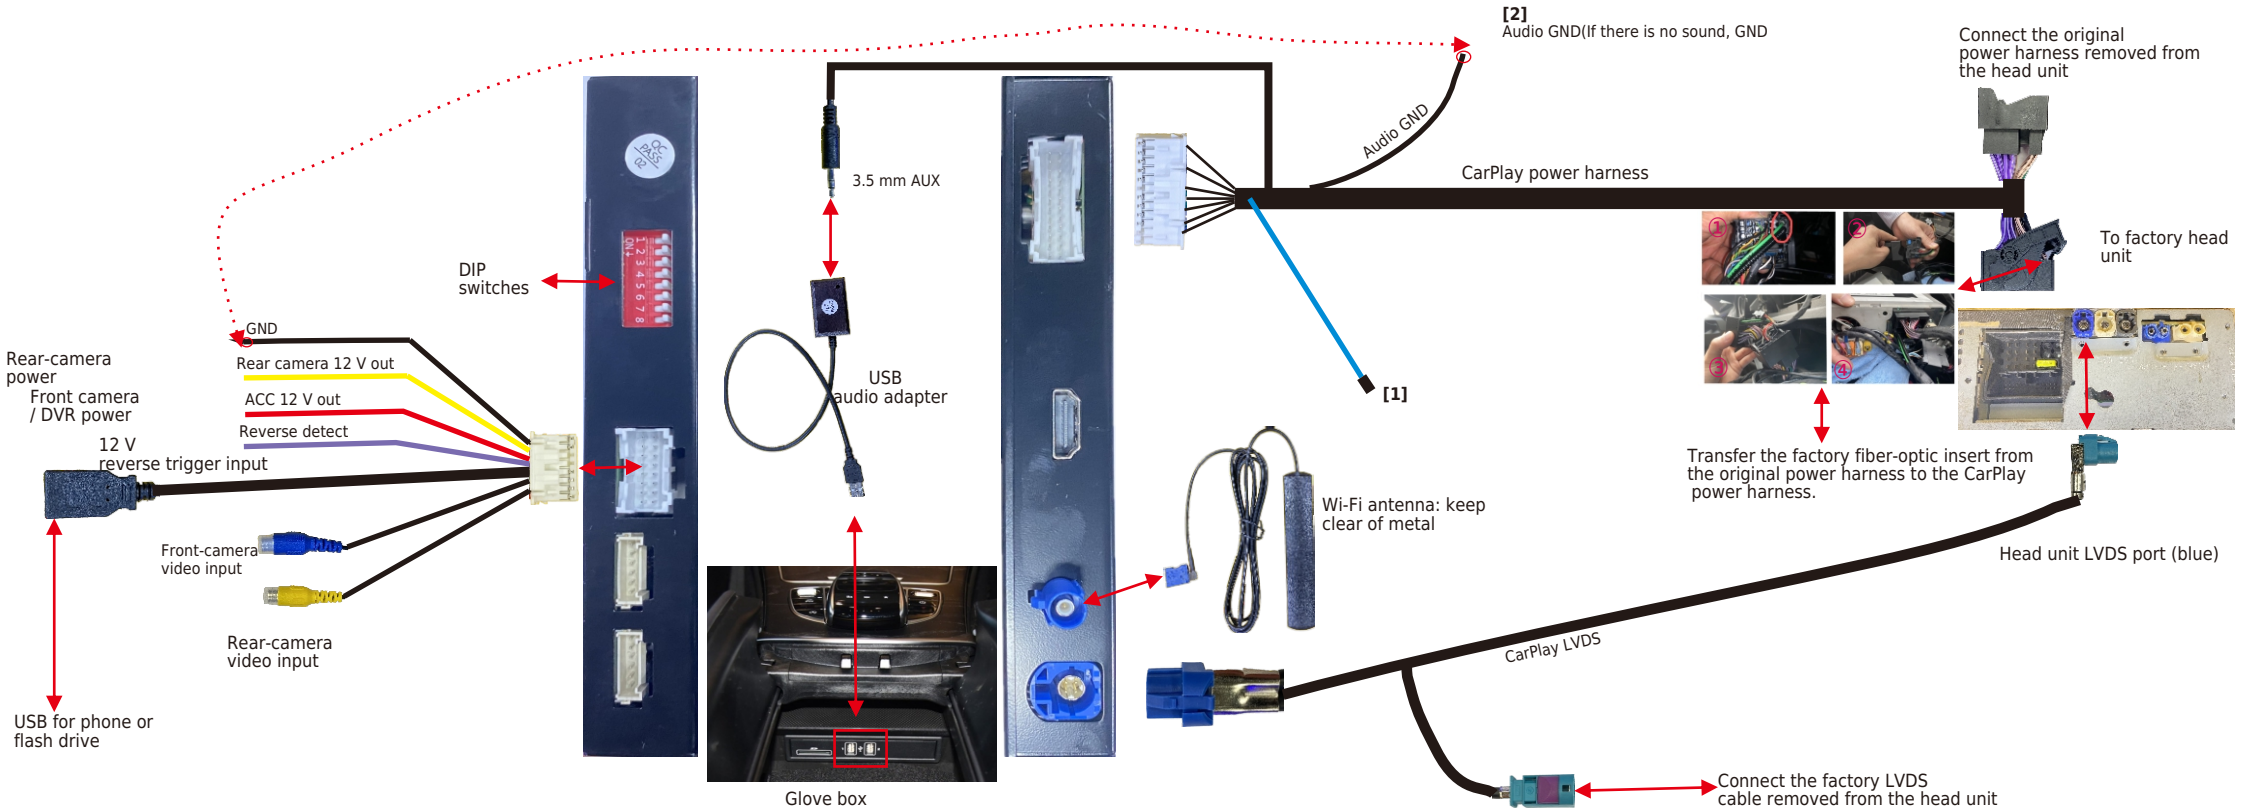


DIP switch settings

Model	Screen size	System	DIP settings
S	12.3	NTG5.0	6,8 ON
X/V/C/GLC	8.4(960*575)		5,6,8 ON
C/GLC/GLS/E	7/8.4(800*480)		8 ON
C	6.3		5,8 ON
A/B/CLA/GLA/GLE/E/S	12.3	NTG4.7	4,6,8 ON
	8.4(960*575)		4,5,6,8 ON
	7/8.4(800*480)		4,8 ON
	6.3		4,5,8 ON
GLB/CLA/CLS	12.3	NTG4.8	3,4,6,8 ON
	8.4(960*575)		3,4,5,6,8 ON
	7/8.4(800*480)		3,4,8 ON
	6.3		3,4,5,8 ON

Setup notes
Use the chart as a starting point. If the display is incorrect, verify the NTG version and settings with EZT.

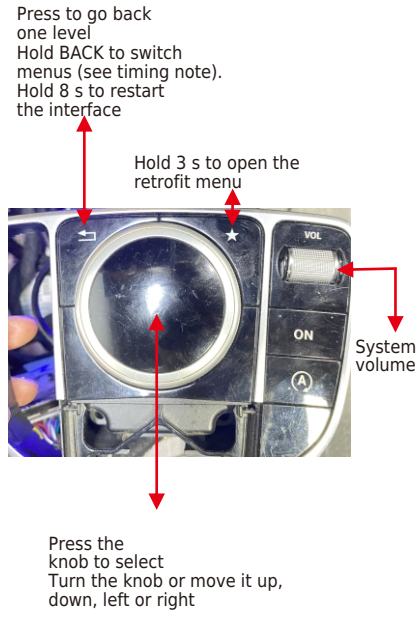

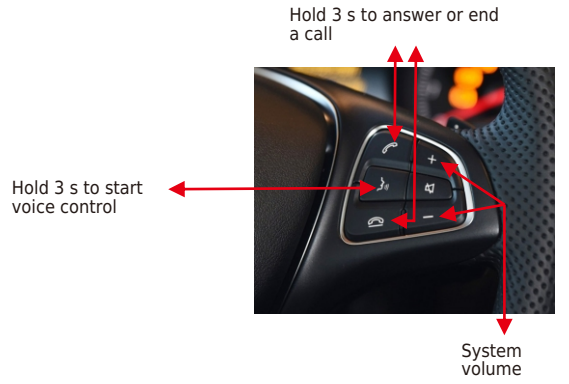

NUMBERED DIAGRAM NOTES

[1] Bluetooth antenna

[2] Leave audio ground disconnected. If audio is absent, connect Audio GND to GND as shown.

BACK timing: the supplier lists both 3 and 5 seconds for switching menus. Use the separate 3-second menu control shown on this diagram. The 8.4-inch resolution differs between the wiring chart and the manual. Confirm your original display and interface revision before setting switches.