
Audi Q3S / A1 RMC wiring diagram

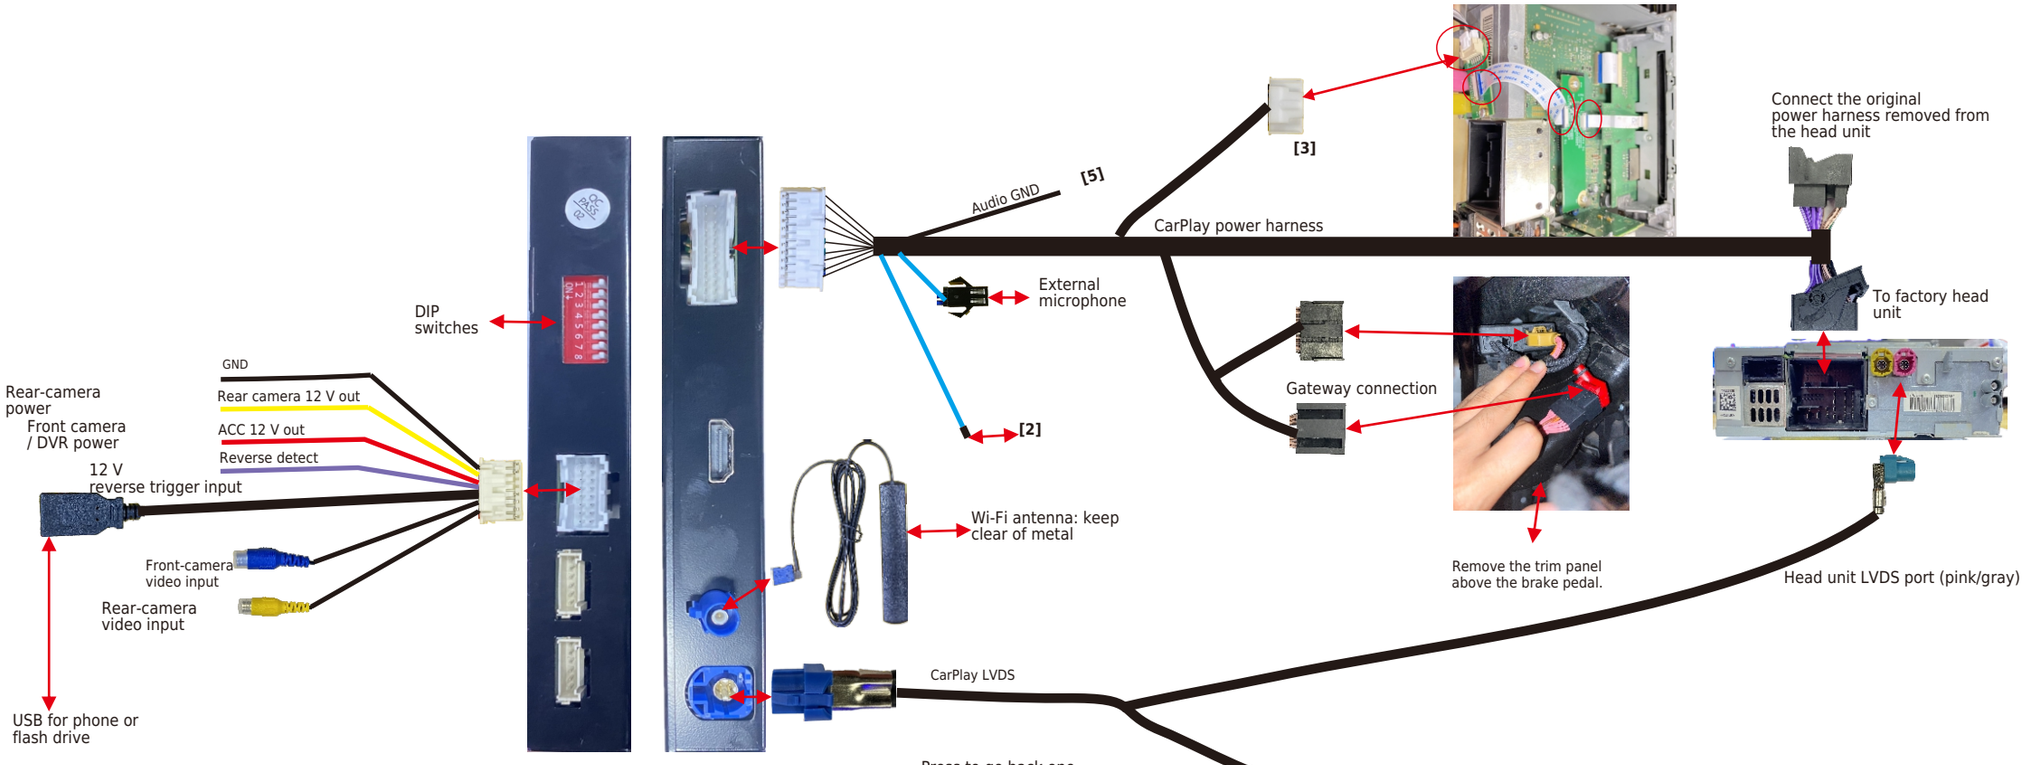



DIP switch settings



Setup notes

Unplug the interface power harness before changing DIP switches.

[4]

To ignore the PARK button, set switch 7 ON.

NUMBERED DIAGRAM NOTES

[1] Previous track

[2] Bluetooth antenna

[3] Connect to the interface board

[4] External microphone: switch 8 ON.

[5] Leave unplugged