

Audi Q5U / C6 / A6 / A7C / A8 wiring diagram

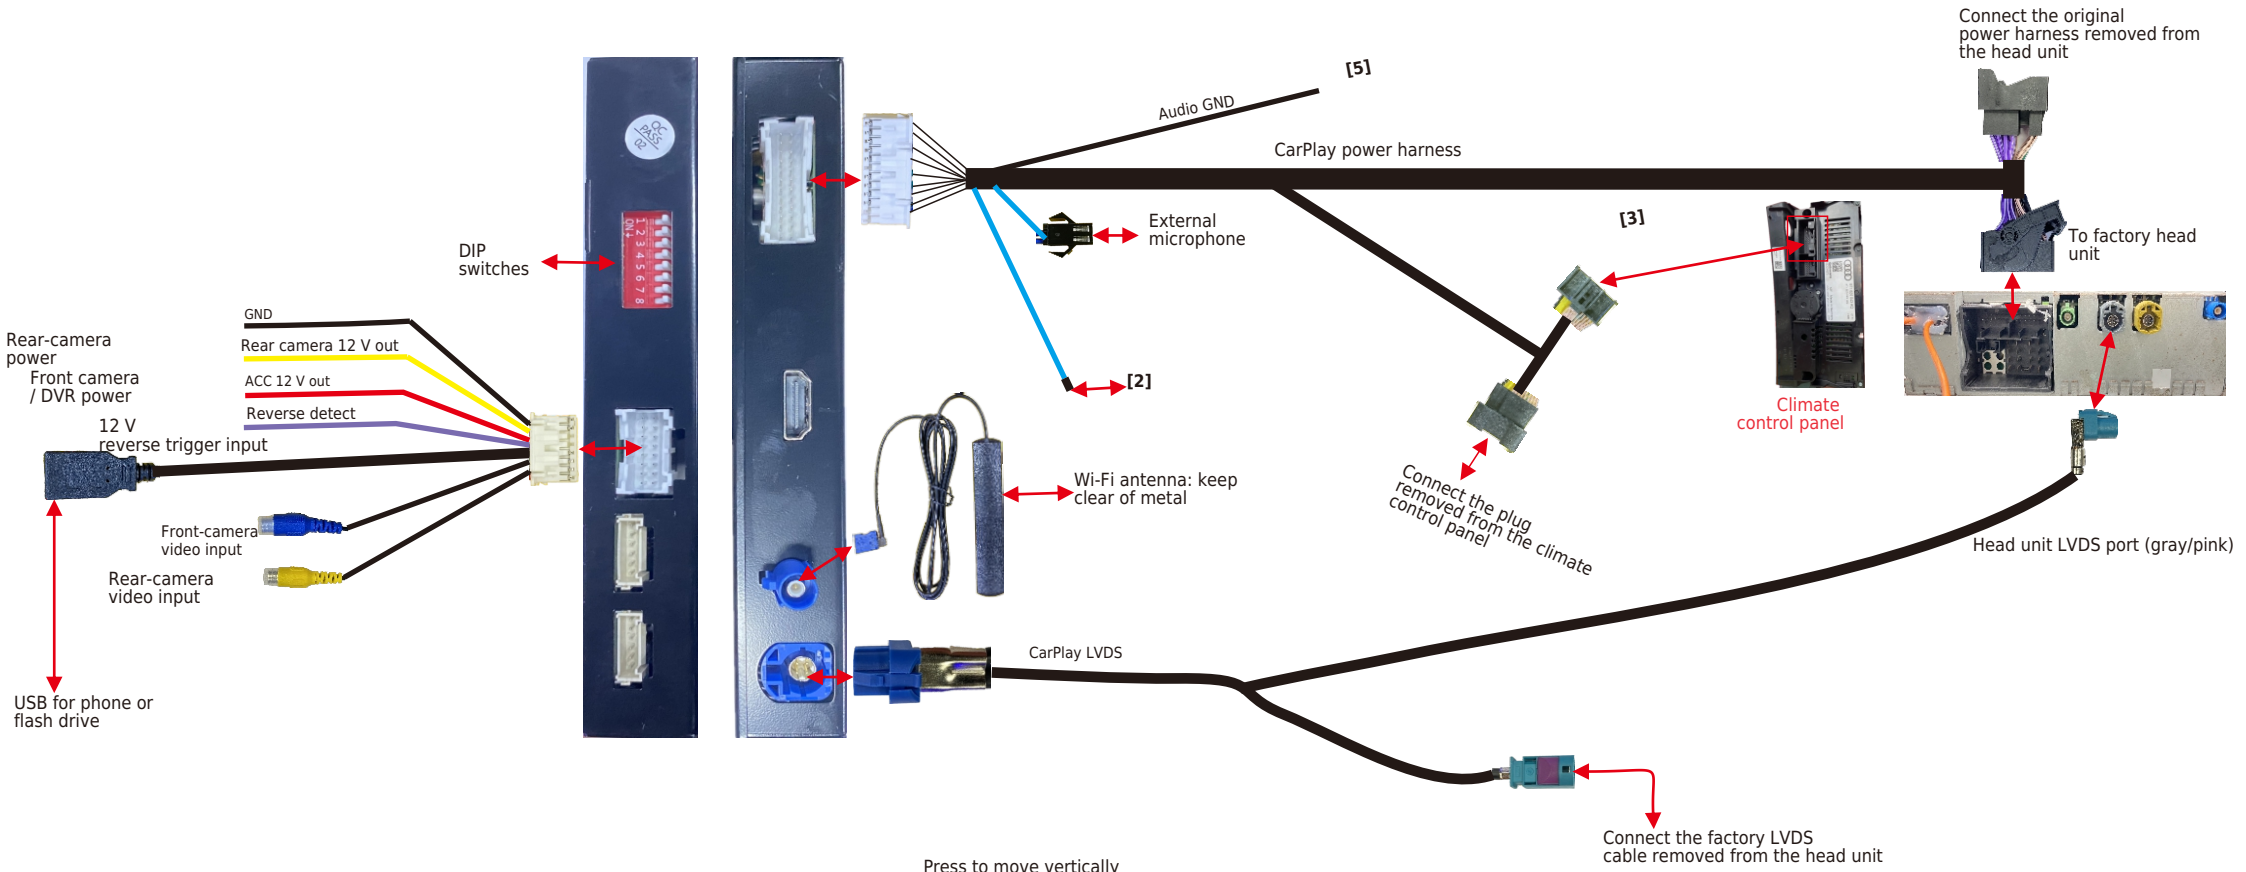

DIP switch settings

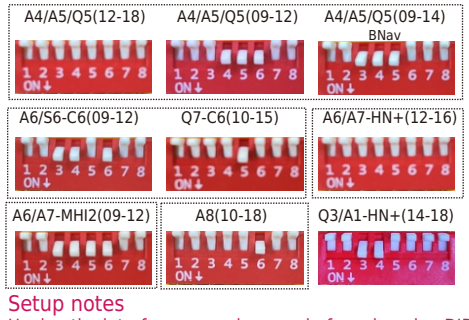



Setup notes

Unplug the interface power harness before changing DIP switches.

[4]

To ignore the PARK button, set switch 7 ON.

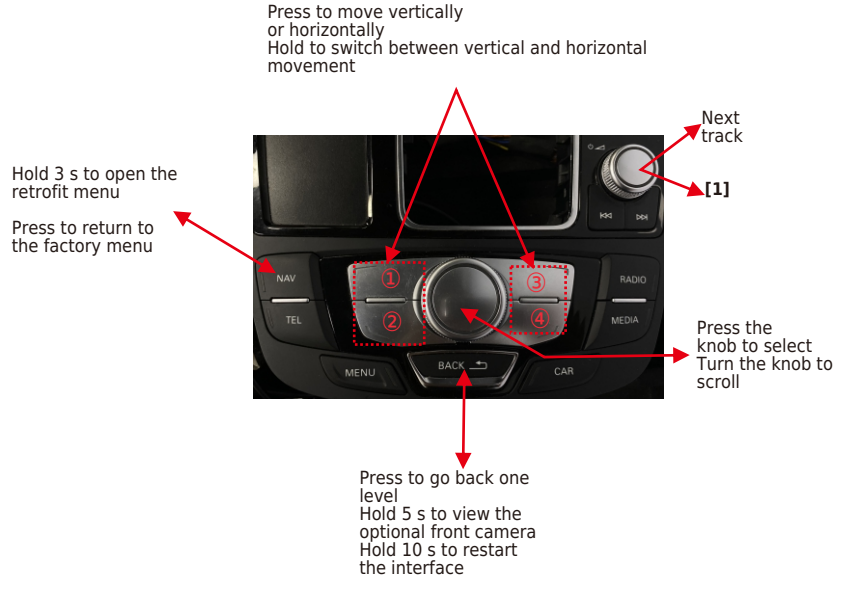

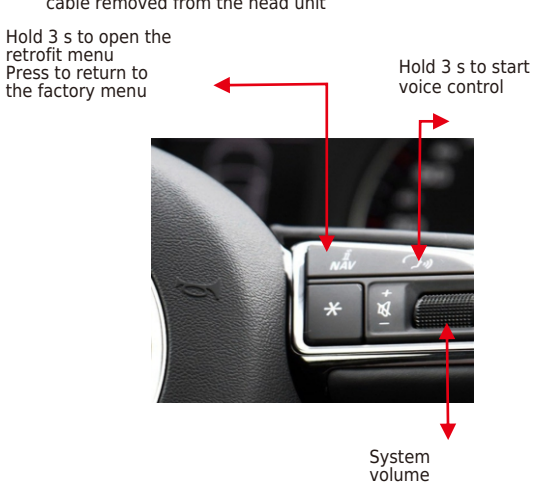

NUMBERED DIAGRAM NOTES

[1] Previous track

[2] Bluetooth antenna

[3] To climate control panel

[4] External microphone: switch 8 ON.

[5] Leave unplugged

A6/A7 MHI2: the years in the switch chart differ from the ordering guide. Confirm the factory system and interface revision with EZT before choosing a row.