

Jaguar / Land Rover Bosch wiring diagram

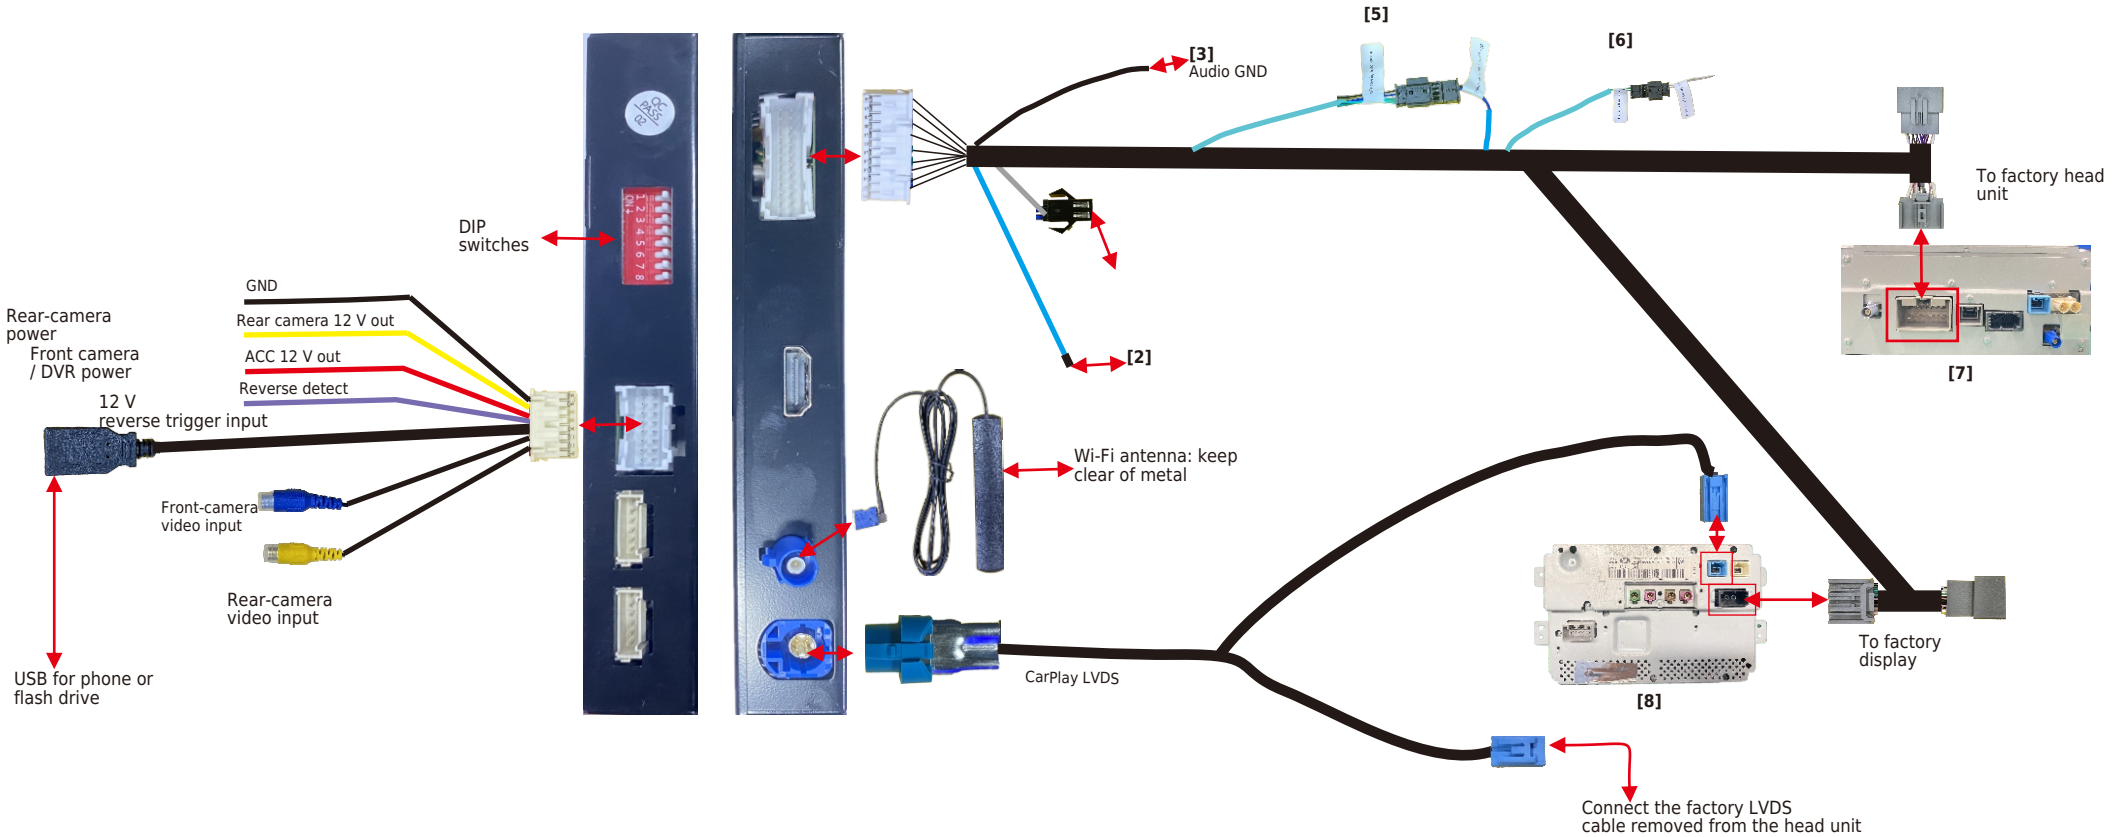


DIP switch settings

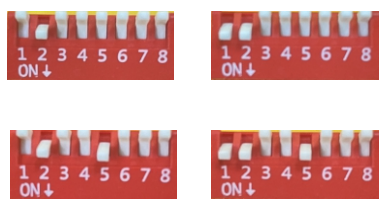

Setup notes
Unplug the interface power harness before changing DIP switches.
[4]
To hide factory navigation in the CarPlay interface, set switch 5 ON.



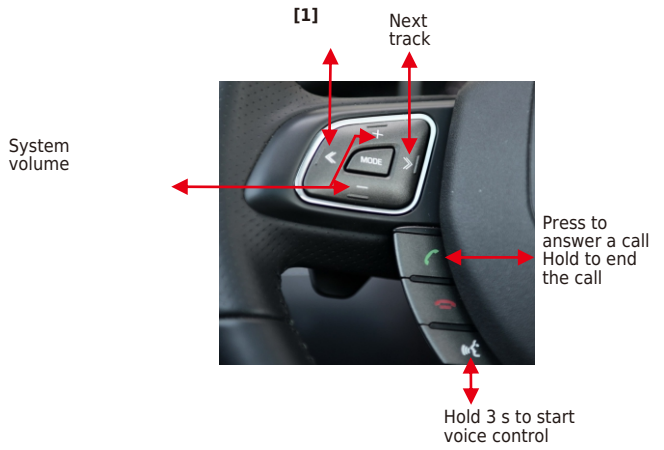

NUMBERED DIAGRAM NOTES

[1] Previous track
[2] Bluetooth antenna
[3] Audio ground
[4] External microphone: switch 8 ON.
[5] Connected by default
[6] Connected by default
[7] Head unit
[8] Display

NAV button: the wiring sheet shows a press and the installation manual specifies a hold. Confirm the control for your interface revision.