

Porsche PCM 3.0 wiring diagram

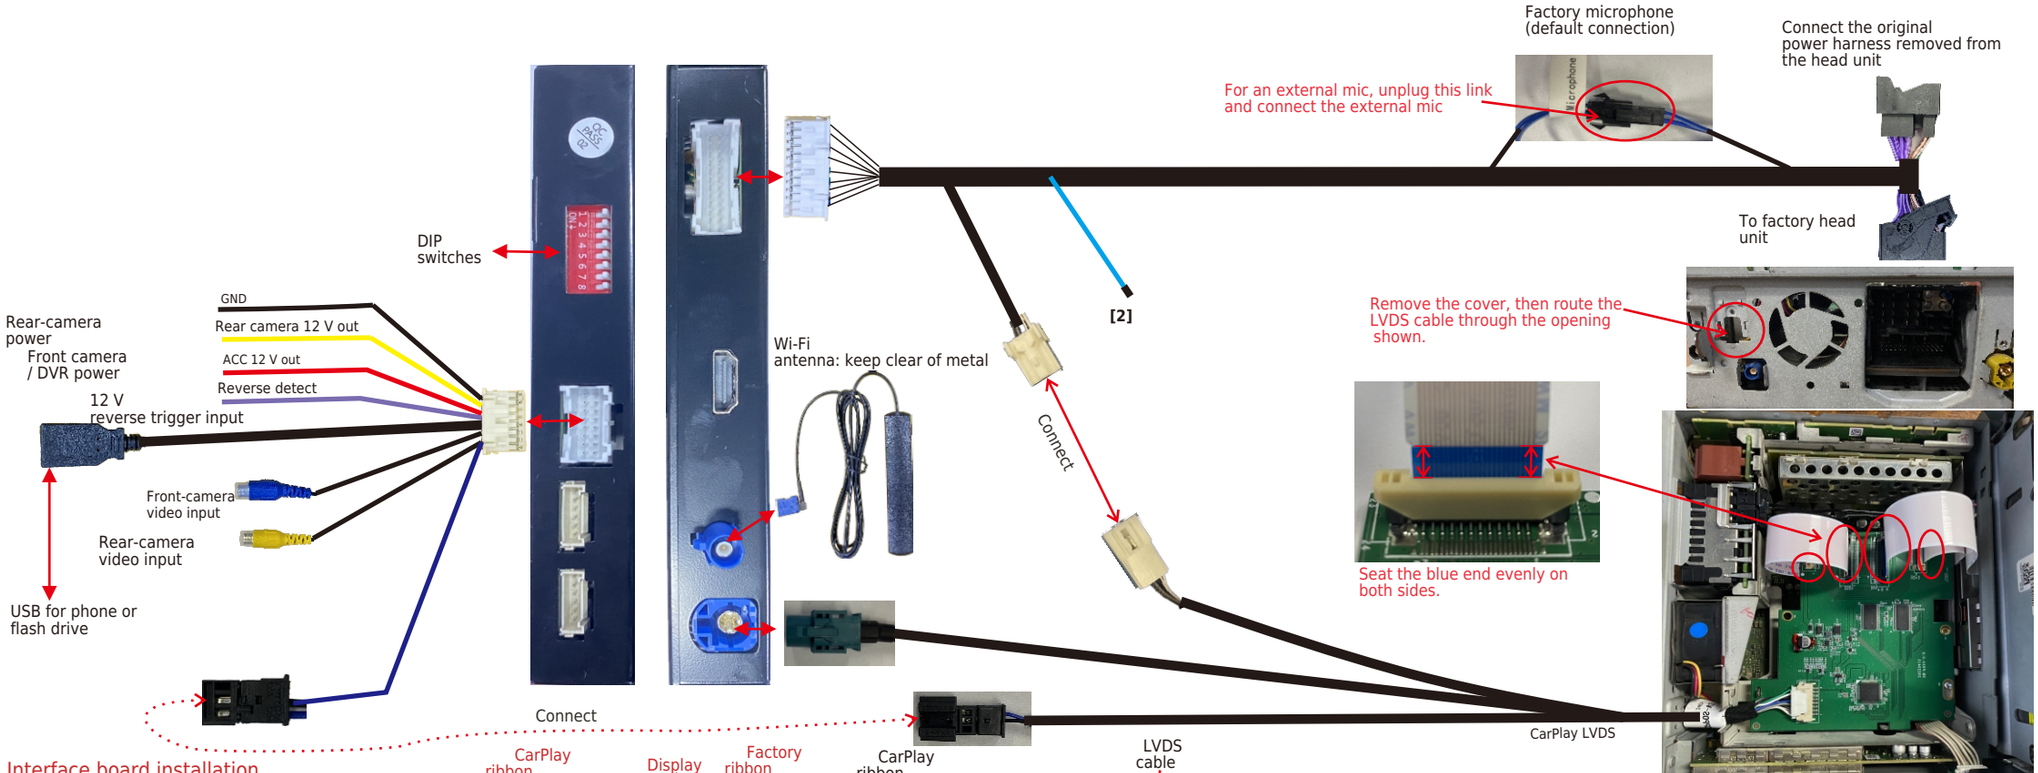

Interface board installation

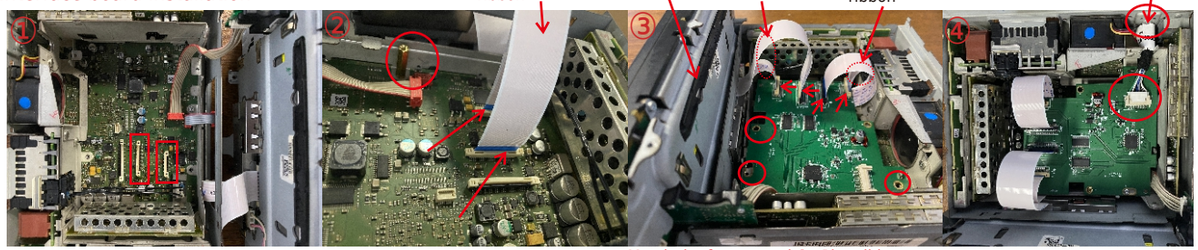

Fit the CarPlay ribbons at the connectors outlined in red.

Check the orientation of the blue end of the CarPlay ribbon.

Fit the brass standoff in the position shown.

Match the factory and CarPlay ribbon positions. Check the blue ends on all four ribbons.

Check the mounting positions of all three screws.

Check the LVDS cable position shown.



1 / 2: Hold 3 s to switch between factory and retrofit menus.

3: Press to go back. Hold 8 s to restart the interface.

4: Hold 5 s to view the optional front camera.

5: Press to select. Hold 5 s for voice control. Turn to navigate.

6 / 7: Press to answer or end a call.

8 / 9: Press for next or previous track.

10 / 11: Press to answer or end a call.

DIP switch settings

Automatic



Manual



Setup notes

Unplug the interface power harness before changing DIP switches.
[1]

NUMBERED DIAGRAM NOTES

[1] External microphone: switch 8 ON.

[2] Bluetooth antenna