
Porsche PCM 4.0 wiring diagram

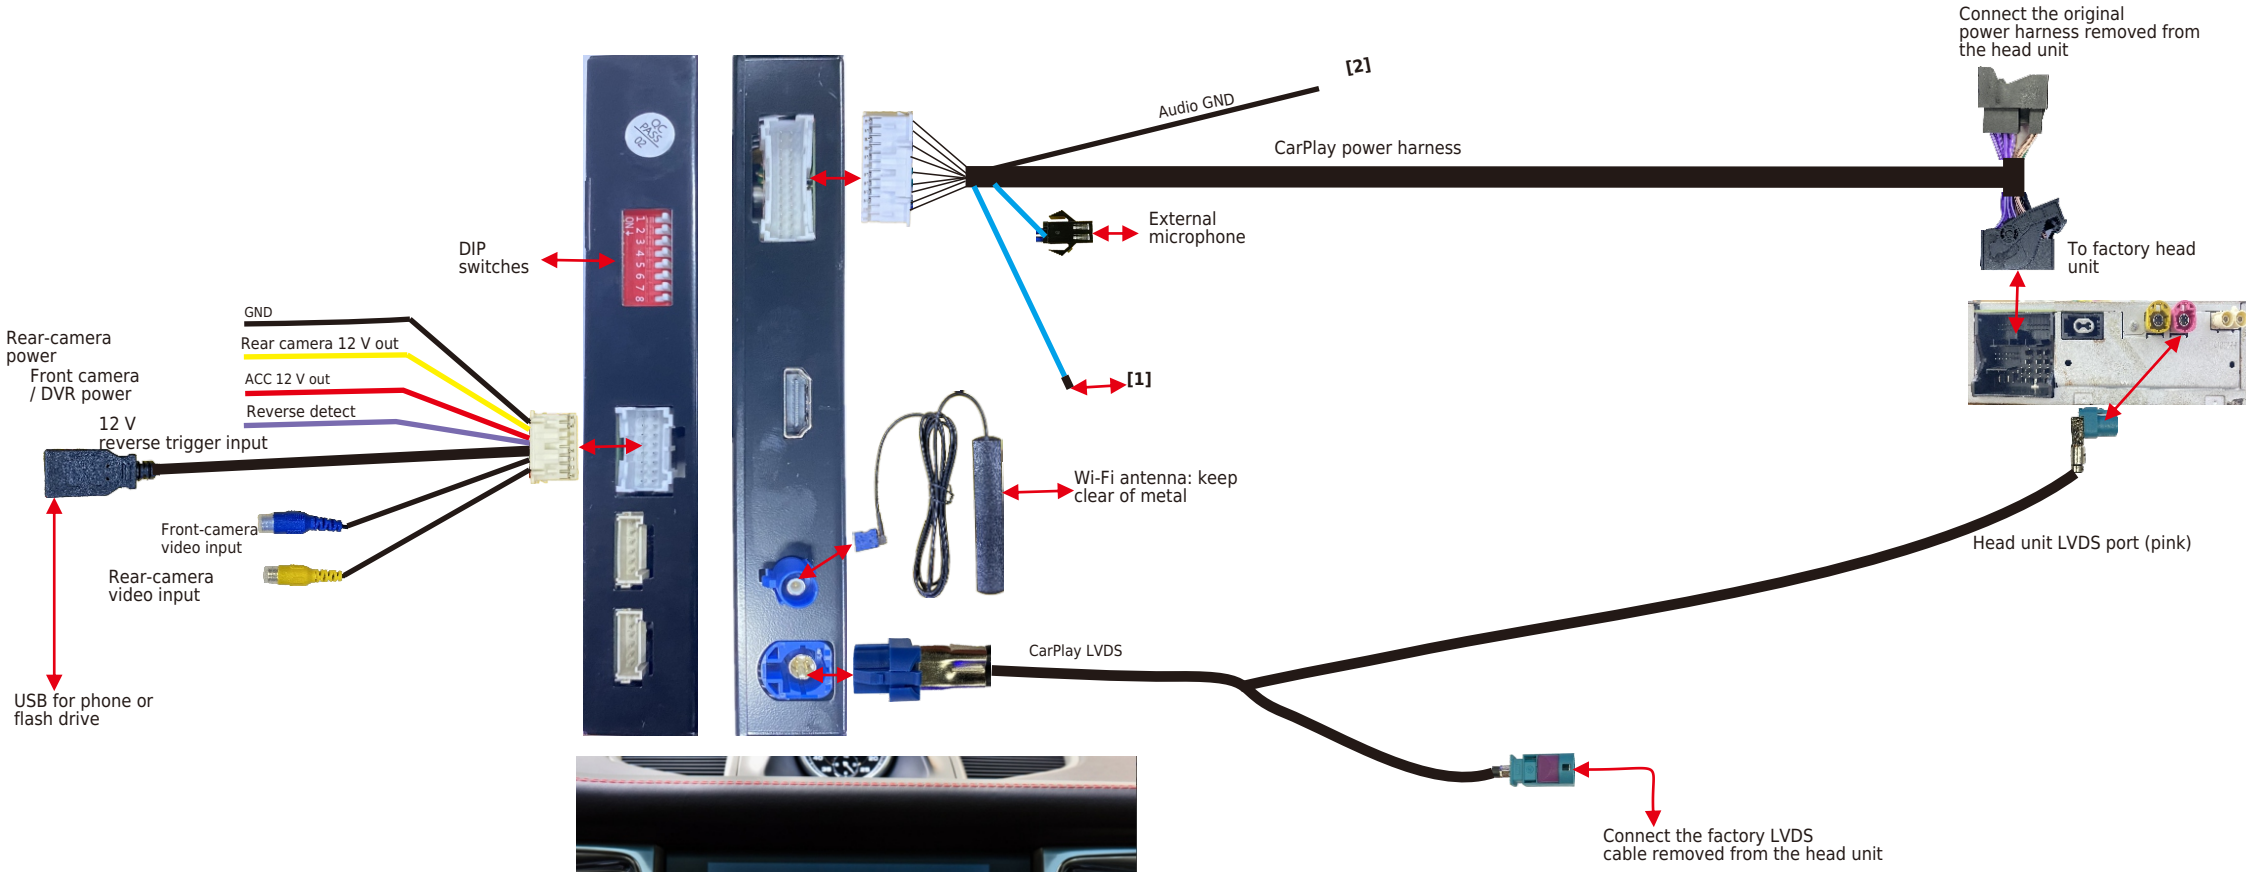

DIP switch settings

7"



Setup notes
Unplug the interface power harness before changing DIP switches.
External microphone: switch 8 ON.



4: Previous / next track.
5: Press to answer. Hold to end the call.
[3]
[4]
8: Press to go back. Hold 2 s for the front camera. Hold 8–10 s to restart the interface.

9: Hold HOME for 3 s to switch between factory and retrofit menus.

10: Press to select. Hold for Siri in CarPlay. Turn left or right to move the cursor.
11: Turn for volume. Press to mute. Hold to turn off the screen.



[5]
[6]
[7]

NUMBERED DIAGRAM NOTES

[1] Bluetooth antenna

[2] Leave unplugged

[3] 6: Press to move the cursor up.

[4] 7: Press to move the cursor down.

[5] 1: Press to answer. Hold to end the call.

[6] 2: Adjust volume up or down. Press to mute.

[7] 3: Press to end the call.